
Wave Series Hinge Door Installation & Maintenance Instructions

Rev. 10.21

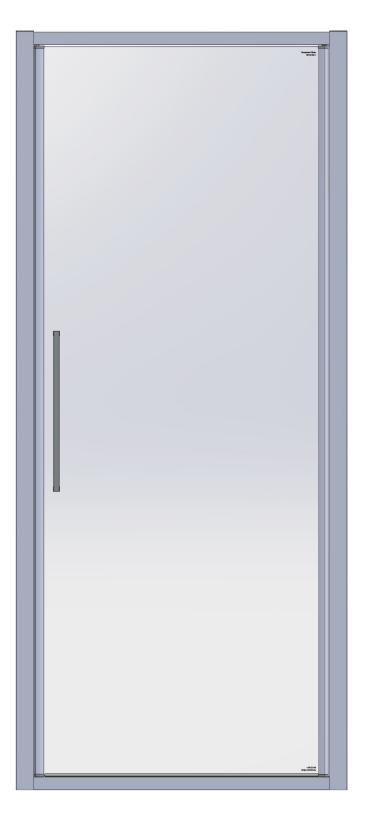



IMPORTANT NOTES:

Please read carefully & retain these instructions for future reference.

- 1. For ease & safety we advise that two persons assemble this product.
- 2. Protect shower tray surfaces at all times.
- 3. Exposed glass corners / edges MUST NOT contact hard surfaces at any time.
- 4. Check for cables, pipes etc before drilling walls.
- Ensure all surfaces are dry, clean & free of loose debris / dust. 5.
- 6. Unpack goods with care (small parts can become lodged in packaging & inadvertently discarded). Check parts supplied against parts & fittings listed herein. Damaged parts / omissions may be resolved by calling Lakes Bathrooms Helpline.
- 7. Whilst precautions are taken in manufacture, care must be taken when handling as rail ends may have sharp edges.
- 8. Before commencing, check:
 - shower tray is level & completely sealed to finished / tiled walls.
 - finished walls are sound & free of cracks loose tiles / grout.
- 9. AFTER INSTALLATION, DO NOT 'WET' ENCLOSURE FOR 48 HOURS (ENSURE FULL CURE OF SILICONE SEALANT).

USE:

General Care & Maintenance.

Provided this product is installed & operated in accordance with these instructions, problems should not arise. However should maintenance be required it should be carried out by a competent person with reference to these instructions. Before any work is carried out the root cause of the problem must be identified. Lakes Bathrooms service engineers are available if necessary to consult / carry out remedial work. Call Lakes Bathrooms HELPLINE.

Cleaning.

(Every one to two weeks depending on local water {hardness} conditions). All glass panels in this product have a hydrophobic coating aiding 'runoff' of water droplets, reducing the need for frequent cleaning. For best appearance / product life however, regular cleaning is

Use ONLY mild soap / detergent solutions to clean. Rinse with water, squeegee glass panels & wipe frames dry with a soft cloth. Under no circumstances should abrasive, caustic or scouring products be used. Non compliance with these cleaning instructions may cause decorative finishes to deteriorate & could adversely affect safe operation of the enclosure.

Limescale ~ should a build up of limescale occur, remove using a 50:50 solution of white vinegar & water applied with a soft cloth & rinsed / dried thoroughly afterwards.

Daily Care.

To prevent the build up of limescale, do not allow water droplets to dry on glass or frames. After showering, rinse with water, remove droplets from glass with a squeegee & wipe frame with a soft cloth.

Customer Service.

Quality Guarantee: Lakes Bathrooms Ltd guarantee Shower Doors & Enclosures against any manufacturing or material defects for the lifetime of the product. We will resolve defects free of charge by repairing / replacing parts as we feel necessary. To be 'free of charge' service work must be carried out by Lakes Bathrooms or approved agents.

Seals are considered 'wear & tear' parts, as such, they are quaranteed for 12 months from purchase.

Not Covered by this Guarantee: Damage or defects that result from improper installation, improper use, or lack of maintenance (including limescale buildup). Damage or defects that result from repairs / modifications undertaken by unauthorized persons. This quarantee is in addition to statutory & other legal rights.

What to do if something goes wrong: Should the product not function correctly on initial use, firstly, contact the installer to check that unit installation & commissioning are in accordance with these instructions. Should this not resolve difficulties or should performance decline, consult 'Troubleshooting' section to see if simple home maintenance is needed. Alternatively our HELPLINE staff can assist, or if necessary arrange for a service engineer to visit.

Spares: We maintain extensive spare part stocks. Spares can be ordered / purchased from your retailer in the first instance. Parts will normally be dispatched within two working days from order placement.

SUPPLIED PARTS:



Door Sub Assy (1x)



Wall Rail Assy 1950mm (2x)





Top Cap inner (Vertical rail) (handed pair)



Top Cap outer (Vertical rail) (handed pair)



 
Door Bottom Seal (1x)



Hinge Block Cover (2x)



Wall Profile Cover Strip (2x)




Frame Magnetic Seal (1x)




4 x 45 long self tapping screw (6x)



 
7,5 x 39mm Wall Plug (6x)



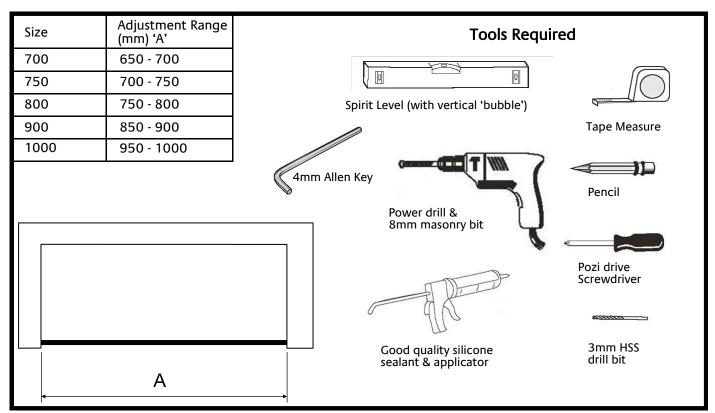

Ensure tray is correctly levelled & that tray / wall (tile) joints are sealed & cured over entire length of tray sides (See Fig A) prior to fitting enclosure.


DO NOT SEAL TRAY EDGES UPTO A FITTED ENCLOSURE!

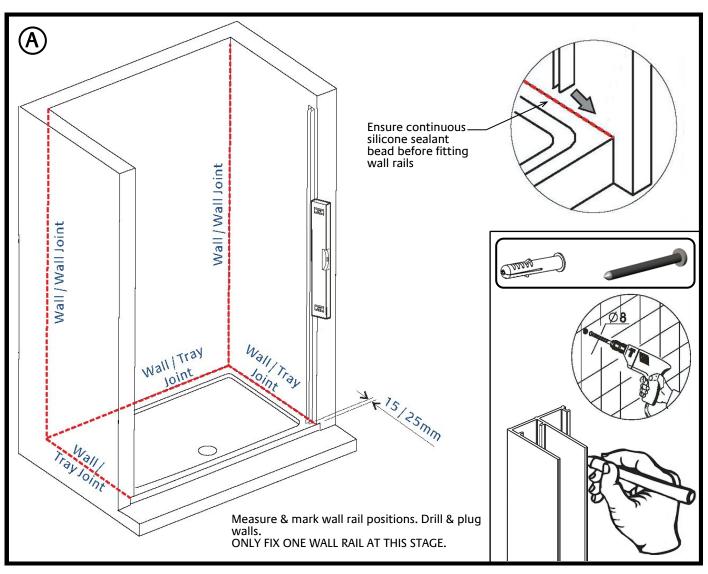

MAIN FRAME SETUP:




- 1. Fit wall rail not already fixed to wall onto side of frame.
- 2. Keeping frame upright, lift over tray rim & insert into fixed wall rail.
- 3. Align holes in unfixed wall rail with plugs & fix wall rail to wall with 4 x 45 long screws.

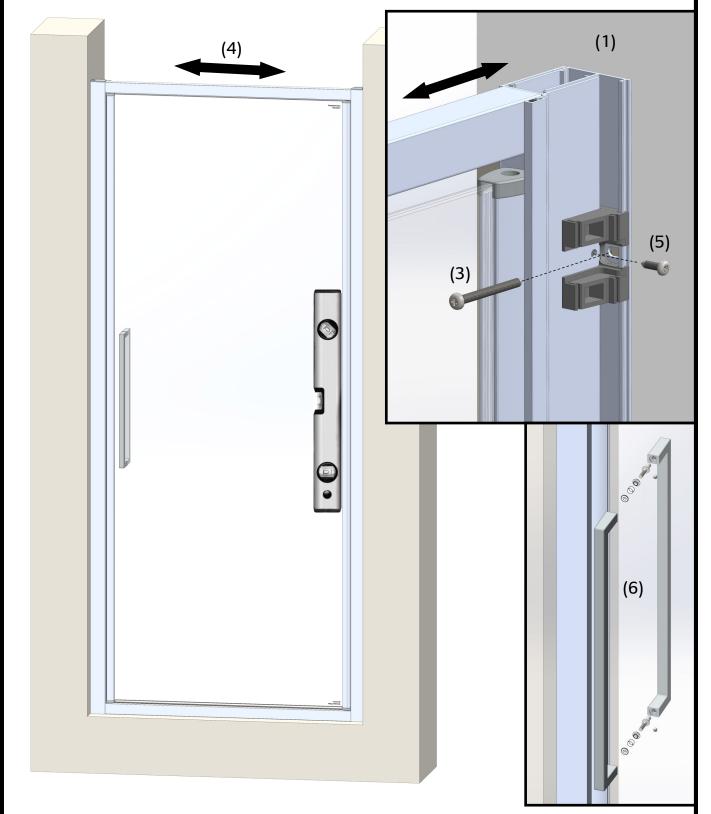

- 4. Manipulate frame within wall rails until centred & ensure frame is completely plumb and door opens & closes without fouling the frame.
- 5. From inside enclosure, using the wall profile holes as a guide, drill (3mm) & screw frame to wall rails using 3.5×10 mm screws.
- 6. Fix handle to door.

DOOR ADJUSTMENT:



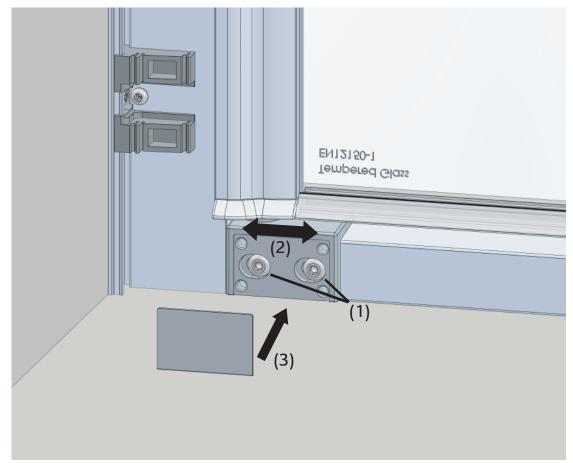


The door should open and close without any interference between parts. If door adjustment is required, loosen hinge screws half a turn (1), move hinge block to desired position (2), Tighten screw fully then fit hinge cover cap (3).

Hinge can be adjusted at both the top & bottom.




Fit Magnetic seal into channel on vertical

profile.
Push cover strip onto the wall profile ensuring it is engaged on all 3 clips.

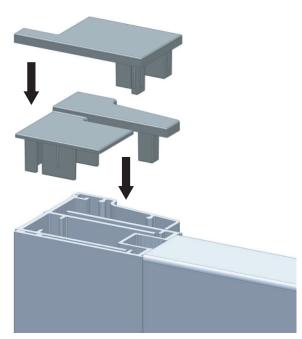

Fit vertical profile cover caps in order shown.

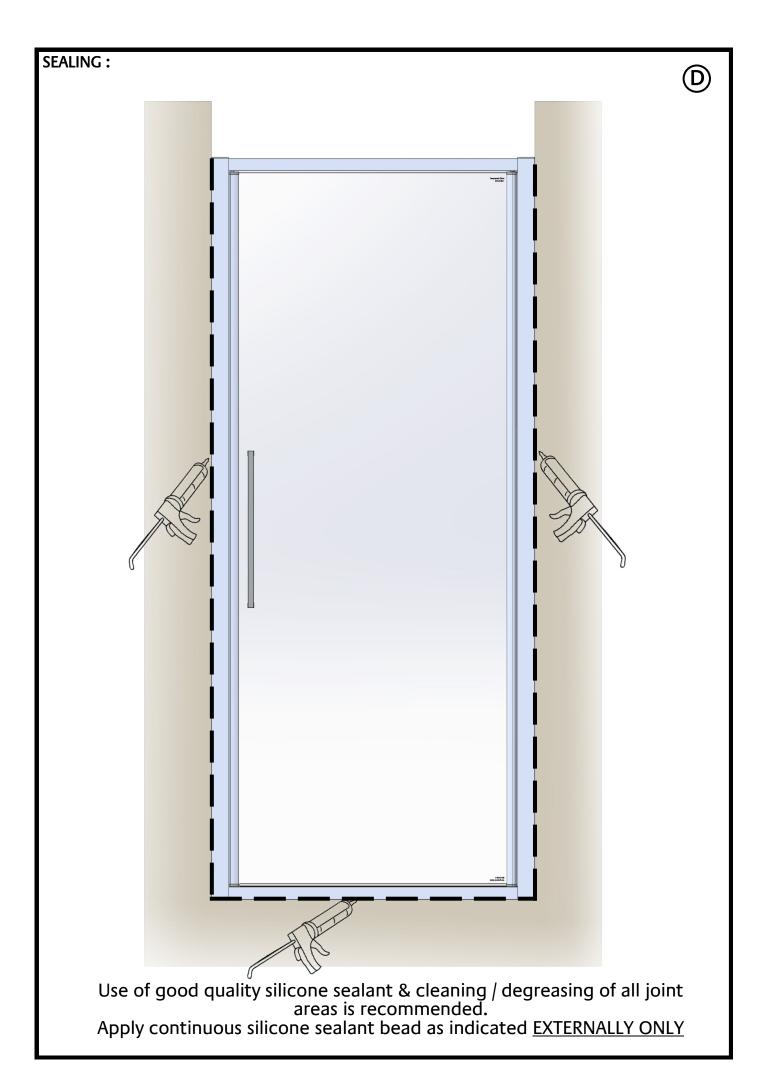

BASIC TROUBLESHOOTING:

Door magnetic seals not meeting precisely / not holding: Check door alignments & adjust if necessary (see fig C).

Check Magnetic Seal orientations (reverse if necessary).

Door motion noisy / Door not running smoothly:

Check for edge seals dragging on frame (can cause 'clicking' noise)\ and adjust door if necessary.

Leakage:

The sealing method described in these instructions relies on a continuous seal being applied between shower walls & tray before installing the enclosure (see fig A), it ensures a watertight seal around the perimeter of the enclosure to the shower walls & tray.

In the unlikely event of an enclosure leak, water will be visible on the outside of the enclosure itself, or around the perimeter silicone seal ONLY. Water / moisture appearing outside this area (i.e. at floor level) is normally due to incorrect tray installation.

Lakes Bathrooms Ltd

Alexandra Way Ashchurch Tewkesbury

Gloucestershire GL20 8NB

Service England, Scotland, Wales 8.30am—5pm Mon ~ Thurs 8.30am—4.30pm Fri

Tel / HELPLINE: 01684 853870

Fax: 01684 857411

www.lakesshoweringspaces.com

Email: admin@lakesshoweringspaces.com

Service : Northern Ireland Ian A Kernohan

Firtrees

Green Way Industrial Estate Conlig

Northern Ireland BT23 7SU

8.30am—5pm Mon ~ Thurs

8.30am—4.30pm Fri

Tel: 02891 270233 Fax: 02891 270597 Email: info@iakonline.com