


LNx
INFOLD SHOWER DOOR
WITH AND WITHOUT SIDE PANEL

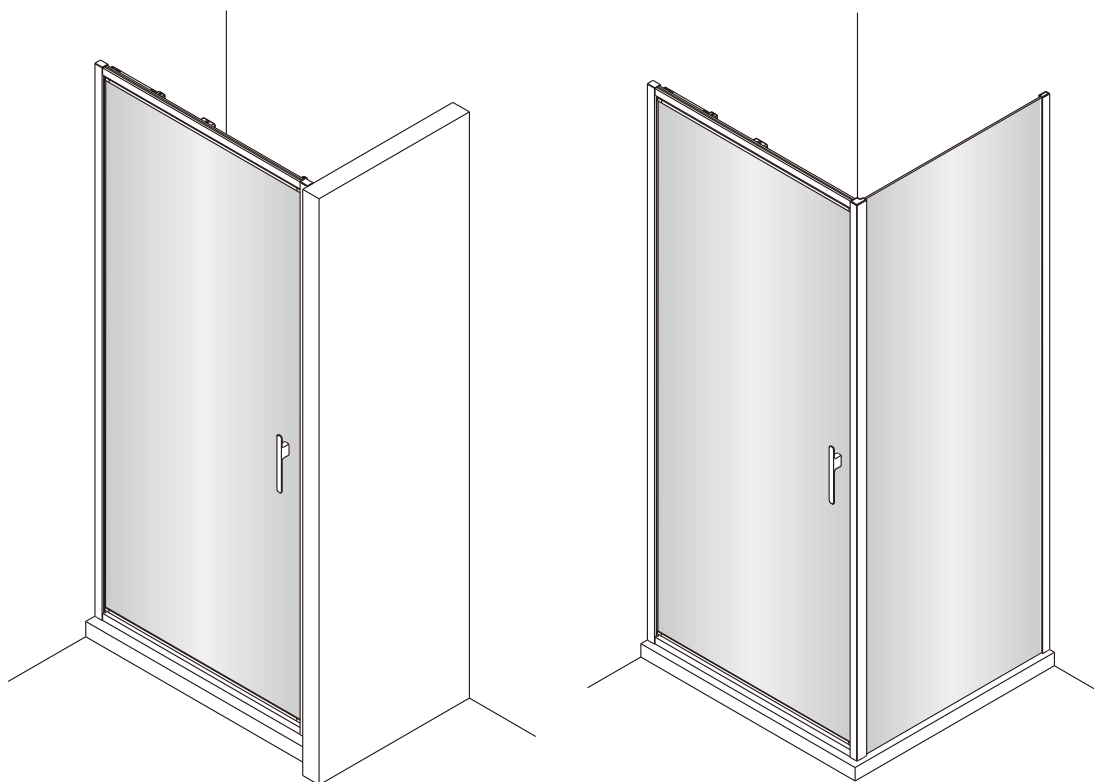

INSTALLATION AND MAINTENANCE GUIDE



DoP 34
26

PH EN 14428 CA-IR-DA

IMPORTANT NOTES :

Please read carefully before commencing installation and retain these instructions for future reference. These instructions are based on normal use, all Infold doors are designed to open outward only.

Before starting installation, check that :

- The installation location is compatible with the size of door supplied.
- All shower enclosure and installation parts listed are present.
- Shower tray (if used) is 100% level & completely sealed to finished / tiled walls.
- Finished walls are sound and free of cracks, loose tiles and/grout.

REPORT DISCREPANCIES IMMEDIATELY

Damaged parts / omissions may be resolved by calling Lakes helpline.

1. For ease & safety we advise that two persons assemble this product.
2. Protect shower tray surface at all times.
3. Exposed glass corners/edges **MUST NOT** contact hard surfaces at any time.
4. Check for cables, pipes etc. before drilling walls.
5. Ensure all surfaces are dry, clean & free from loose debris or dust.
6. Unpack goods with care (small parts can become lodged in packaging and inadvertently discarded)
7. Whilst precautions are taken in manufacture, care must be taken when handling as profile ends may have sharp edges.
8. **AFTER INSTALLATION DO NOT WET ENCLOSURE FOR 24 HOURS TO ENSURE FULL CURE OF SILICONE SEALANT.**


ATTENTION:

BE VERY CAREFUL WHEN HANDLING GLASS, WEAR PROTECTIVE EYEWEAR AND CLOTHING



Setting Out:

Ensure tray / base is completely level in each direction and all tray/base to wall edges are sealed prior to installation.





DO NOT BEGIN INSTALLATION ON A TRAY WHICH IS NOT LEVEL AND HAS NOT BEEN FULLY SEALED.

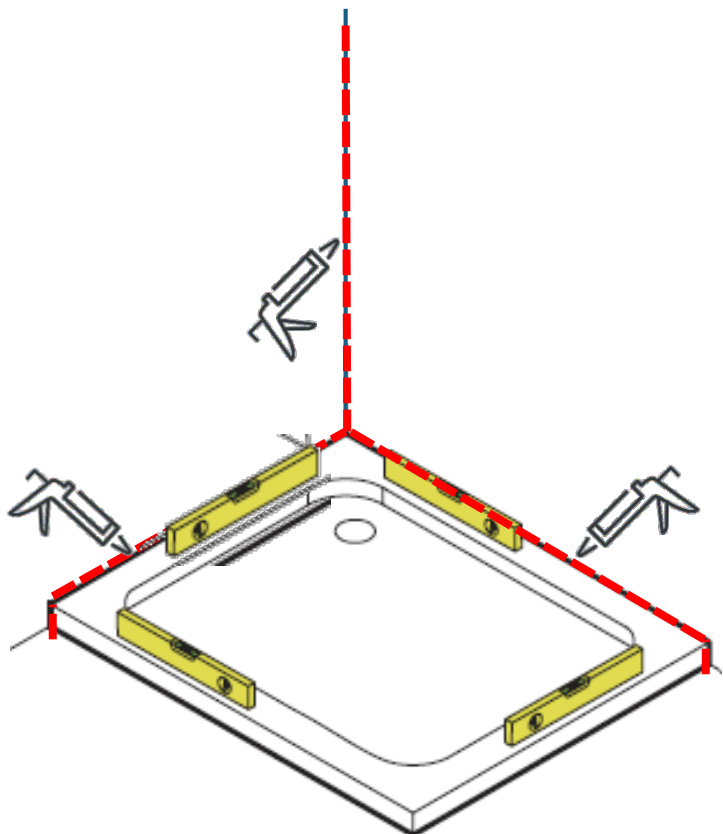


SET A(Page 6-12)

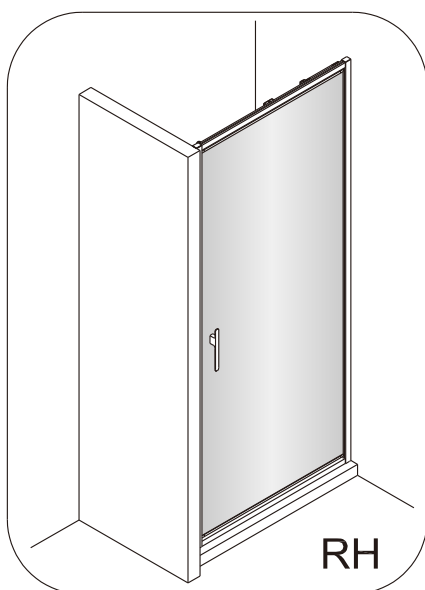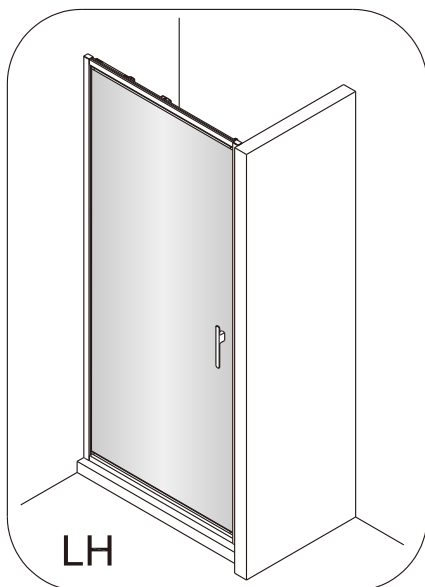


SET B(Page 13-19)

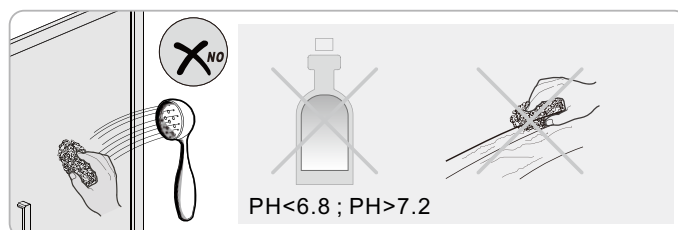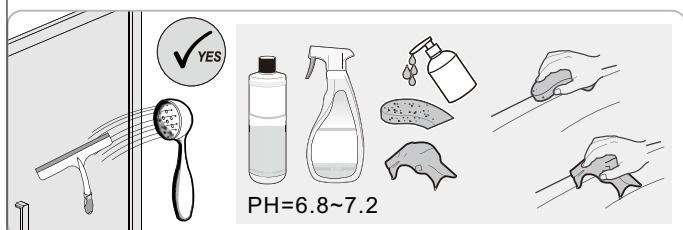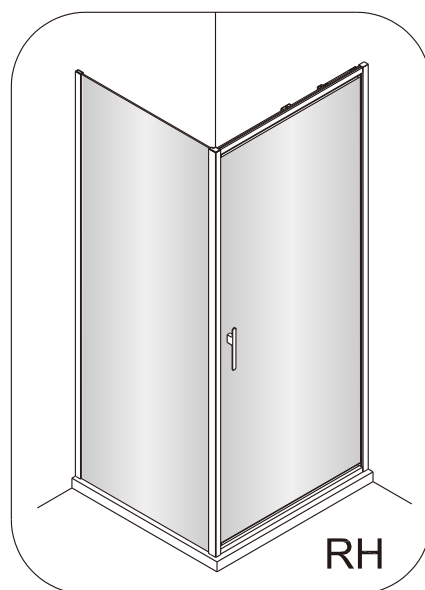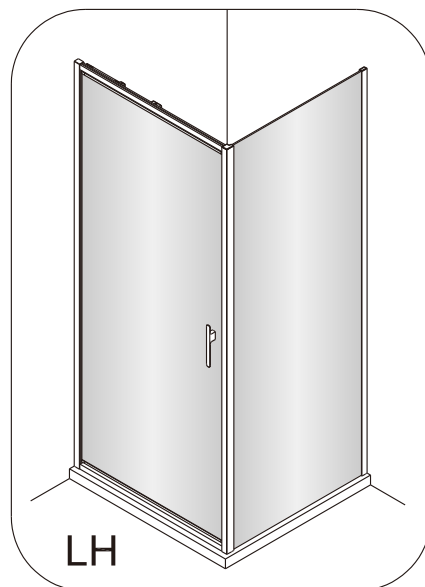











Infold Door
 LNXI080 / LNXI090 / LNXI100

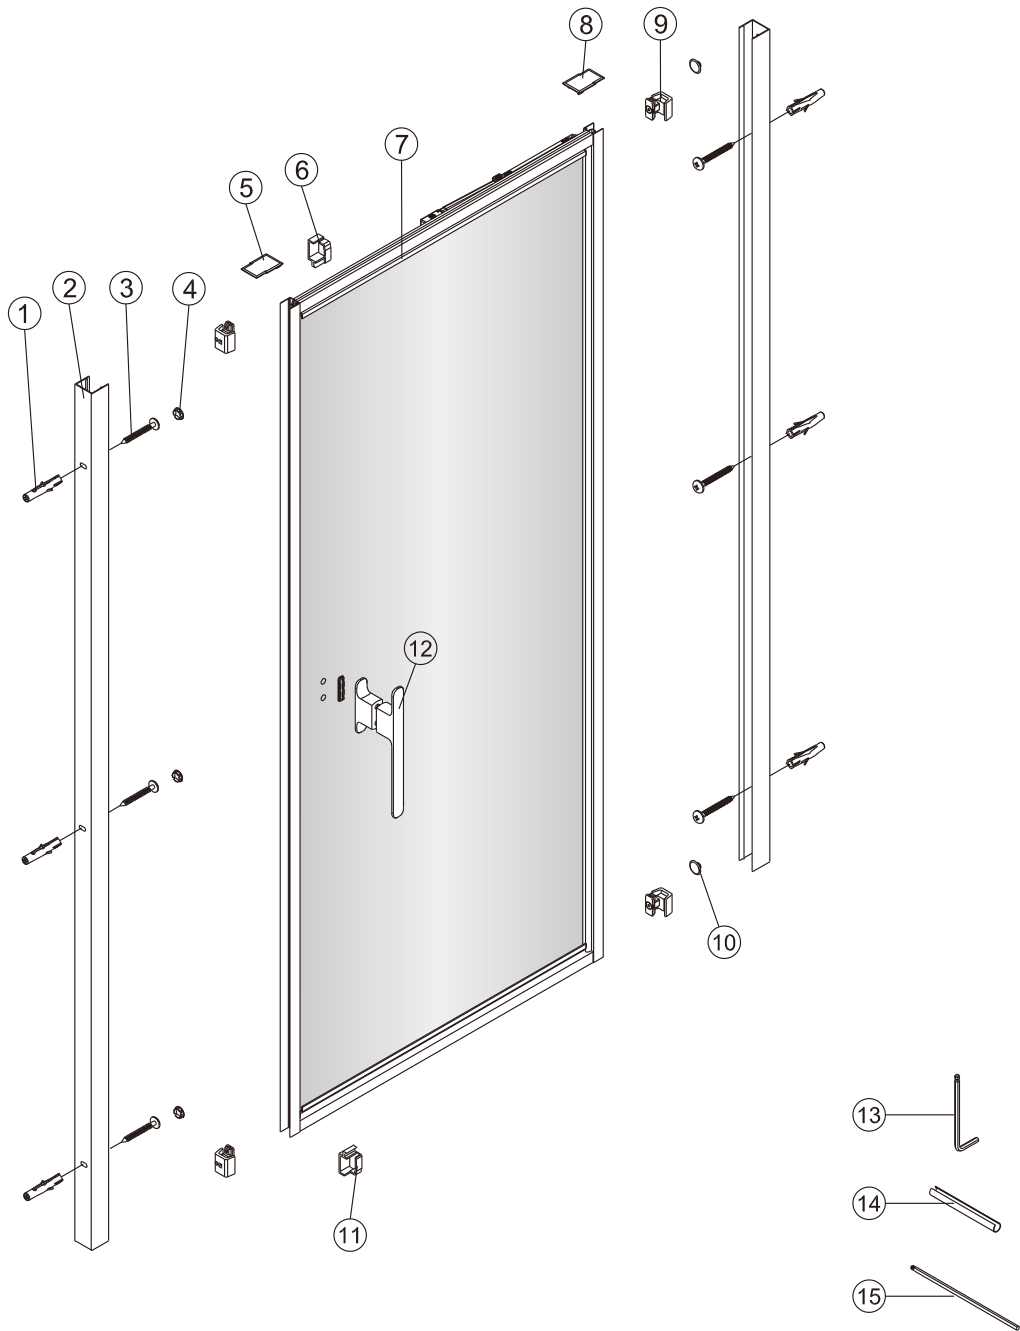

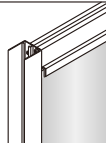1  x6	2  x2	3  x6 ST4x40	4  x3	5  x1	6  x1	7  x1	8  x1	9  x4	10  x2
11  x1	12  x1	13  x1 3mm	14  x1	15  x1 3mm					

Infold Door Side Panel LNXSP080 / LNXSP090 / LNXSP100






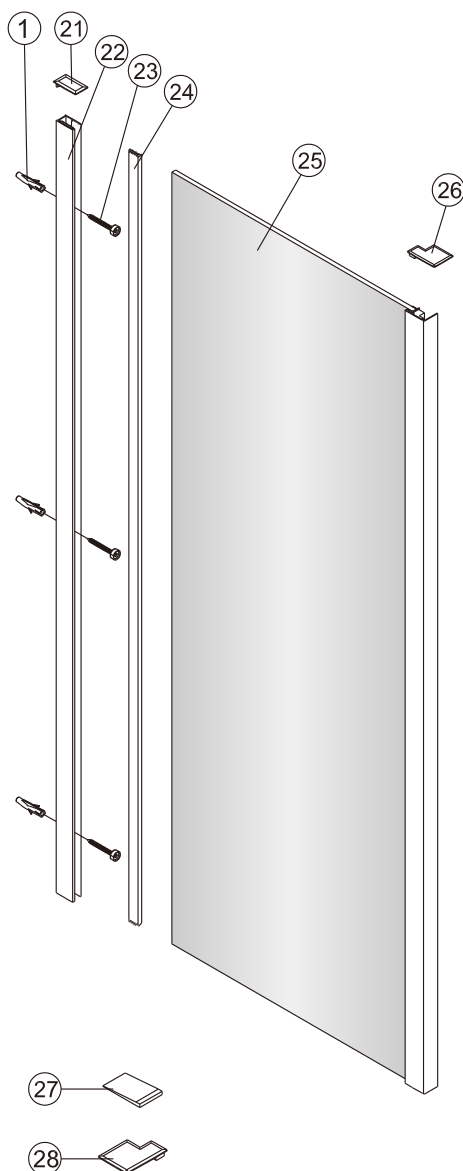


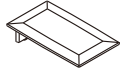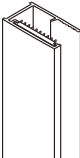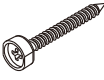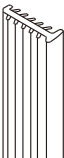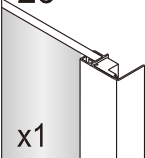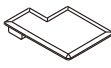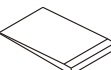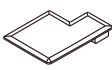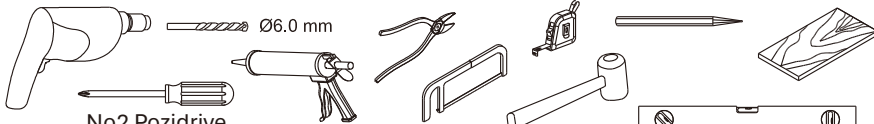
1  x3	21  x1	22  x1	23  ST4X40 x3	24  x1	25  x1	26  x1
27  x2	28  x1					
Tools required  No2 Pozidrive Ø6.0 mm						

SET A


①

	A(mm)
LNXI080	760~790
LNXI090	860~890
LNXI100	960~990

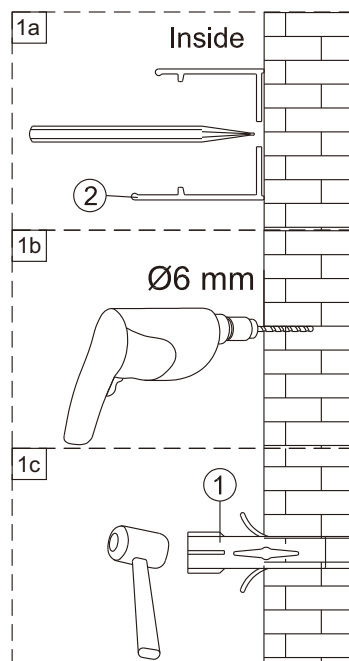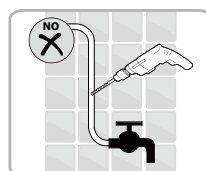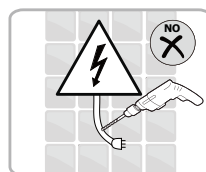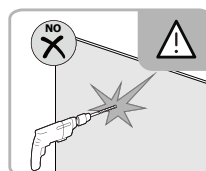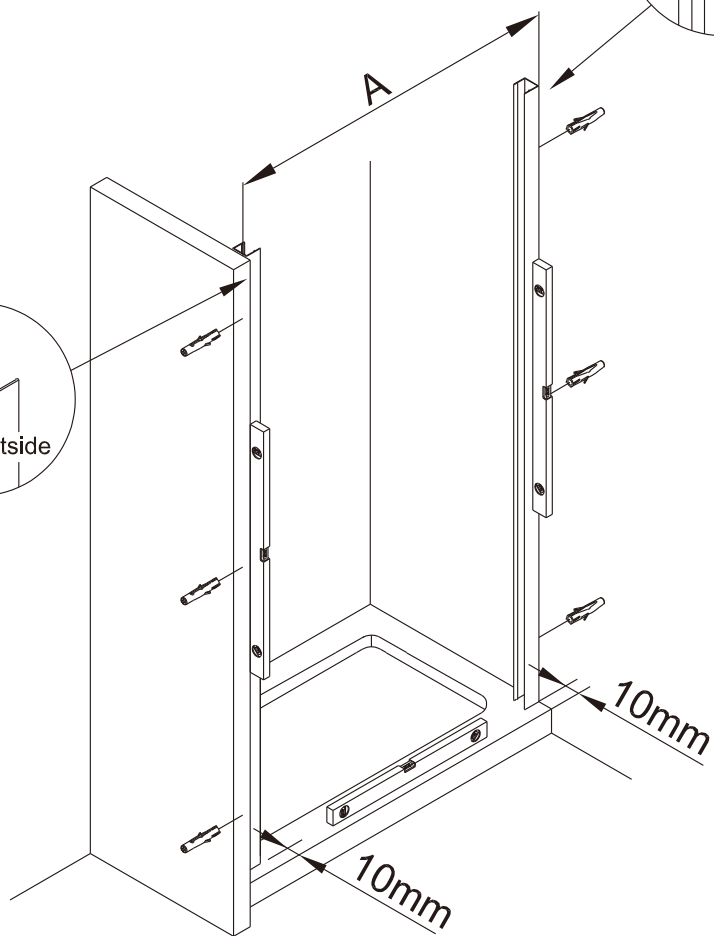
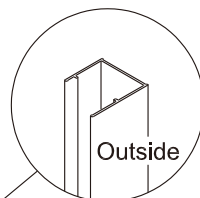


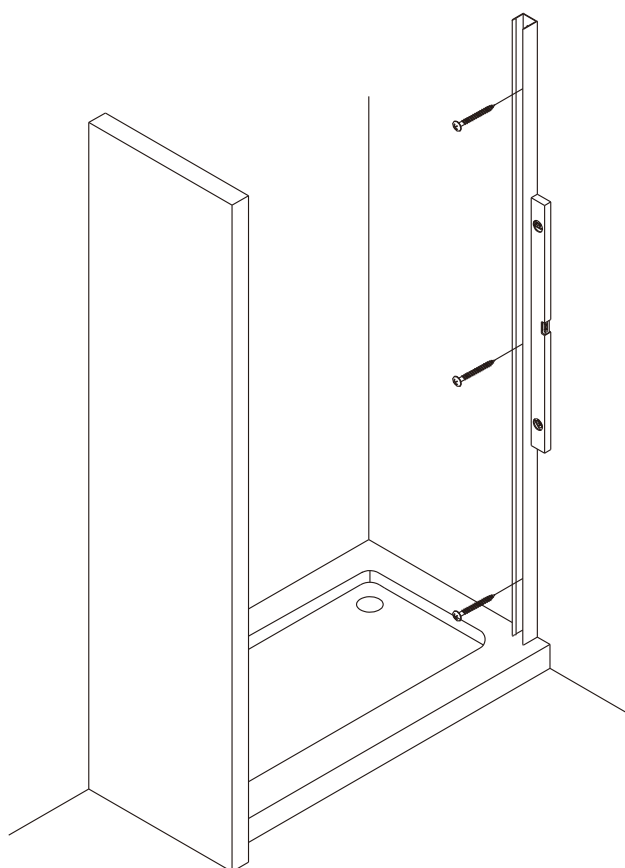


②



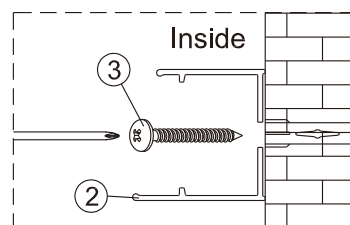


③

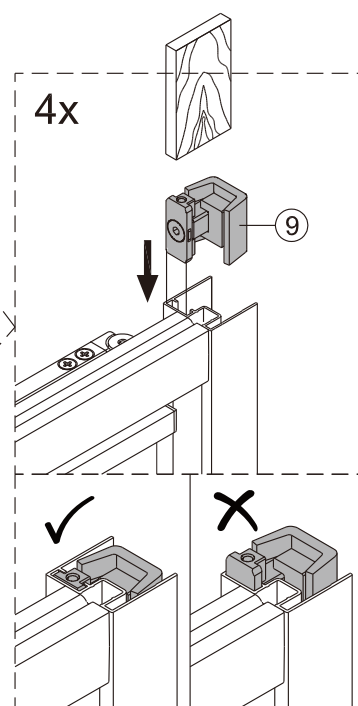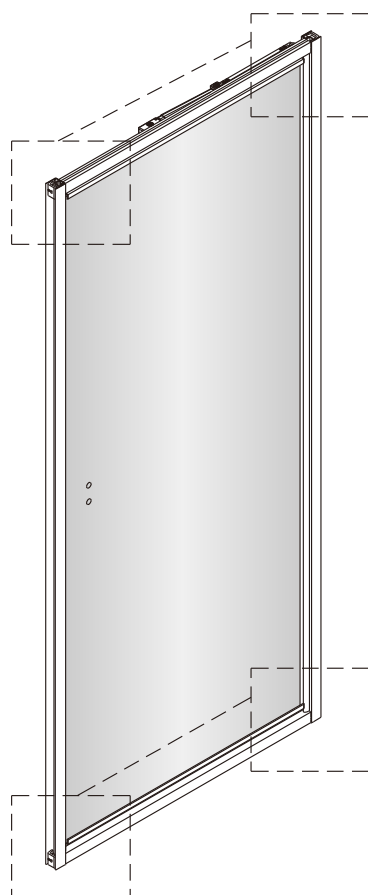


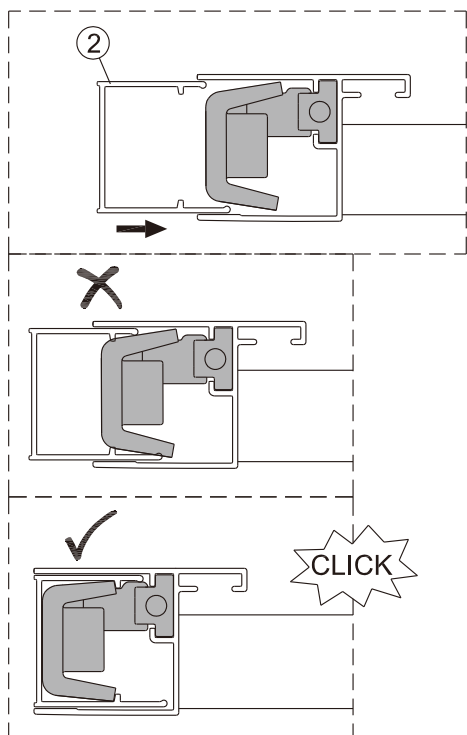



④

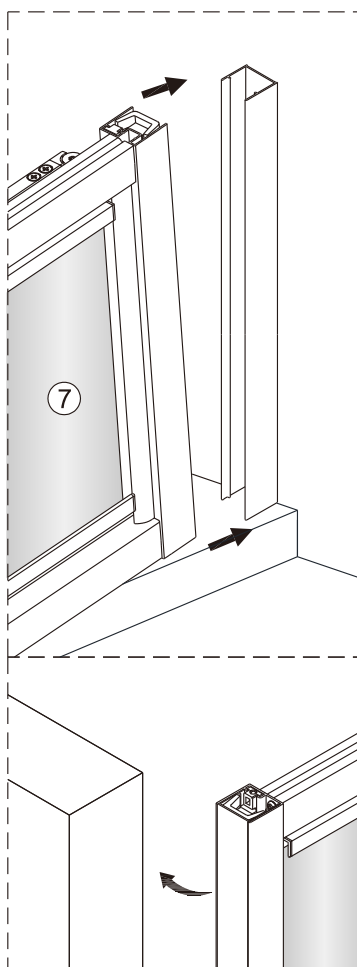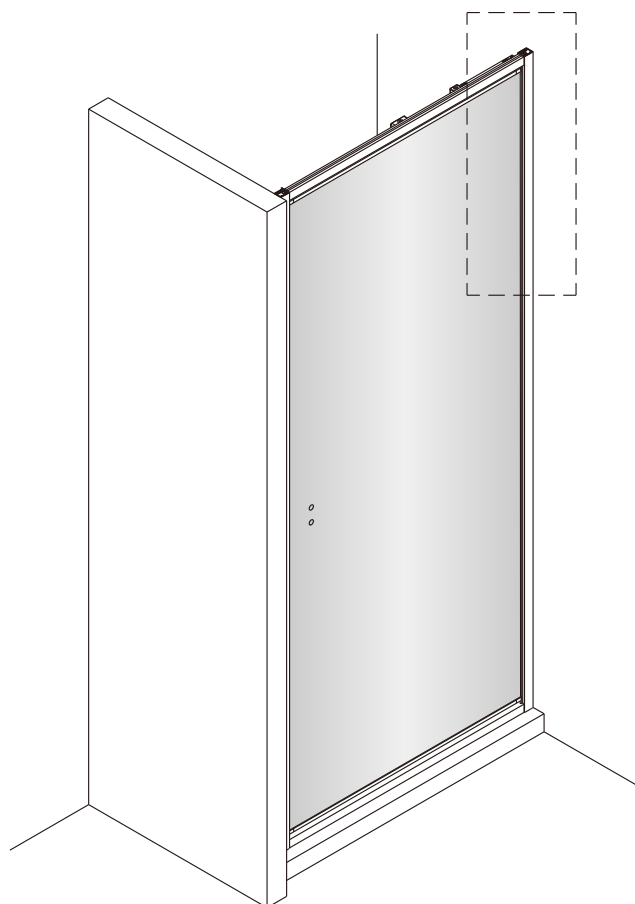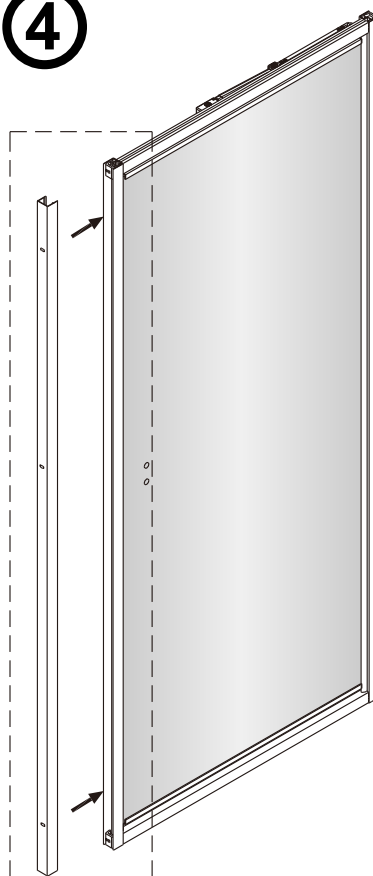



⑤

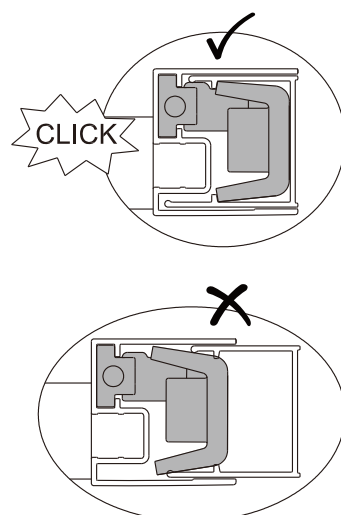


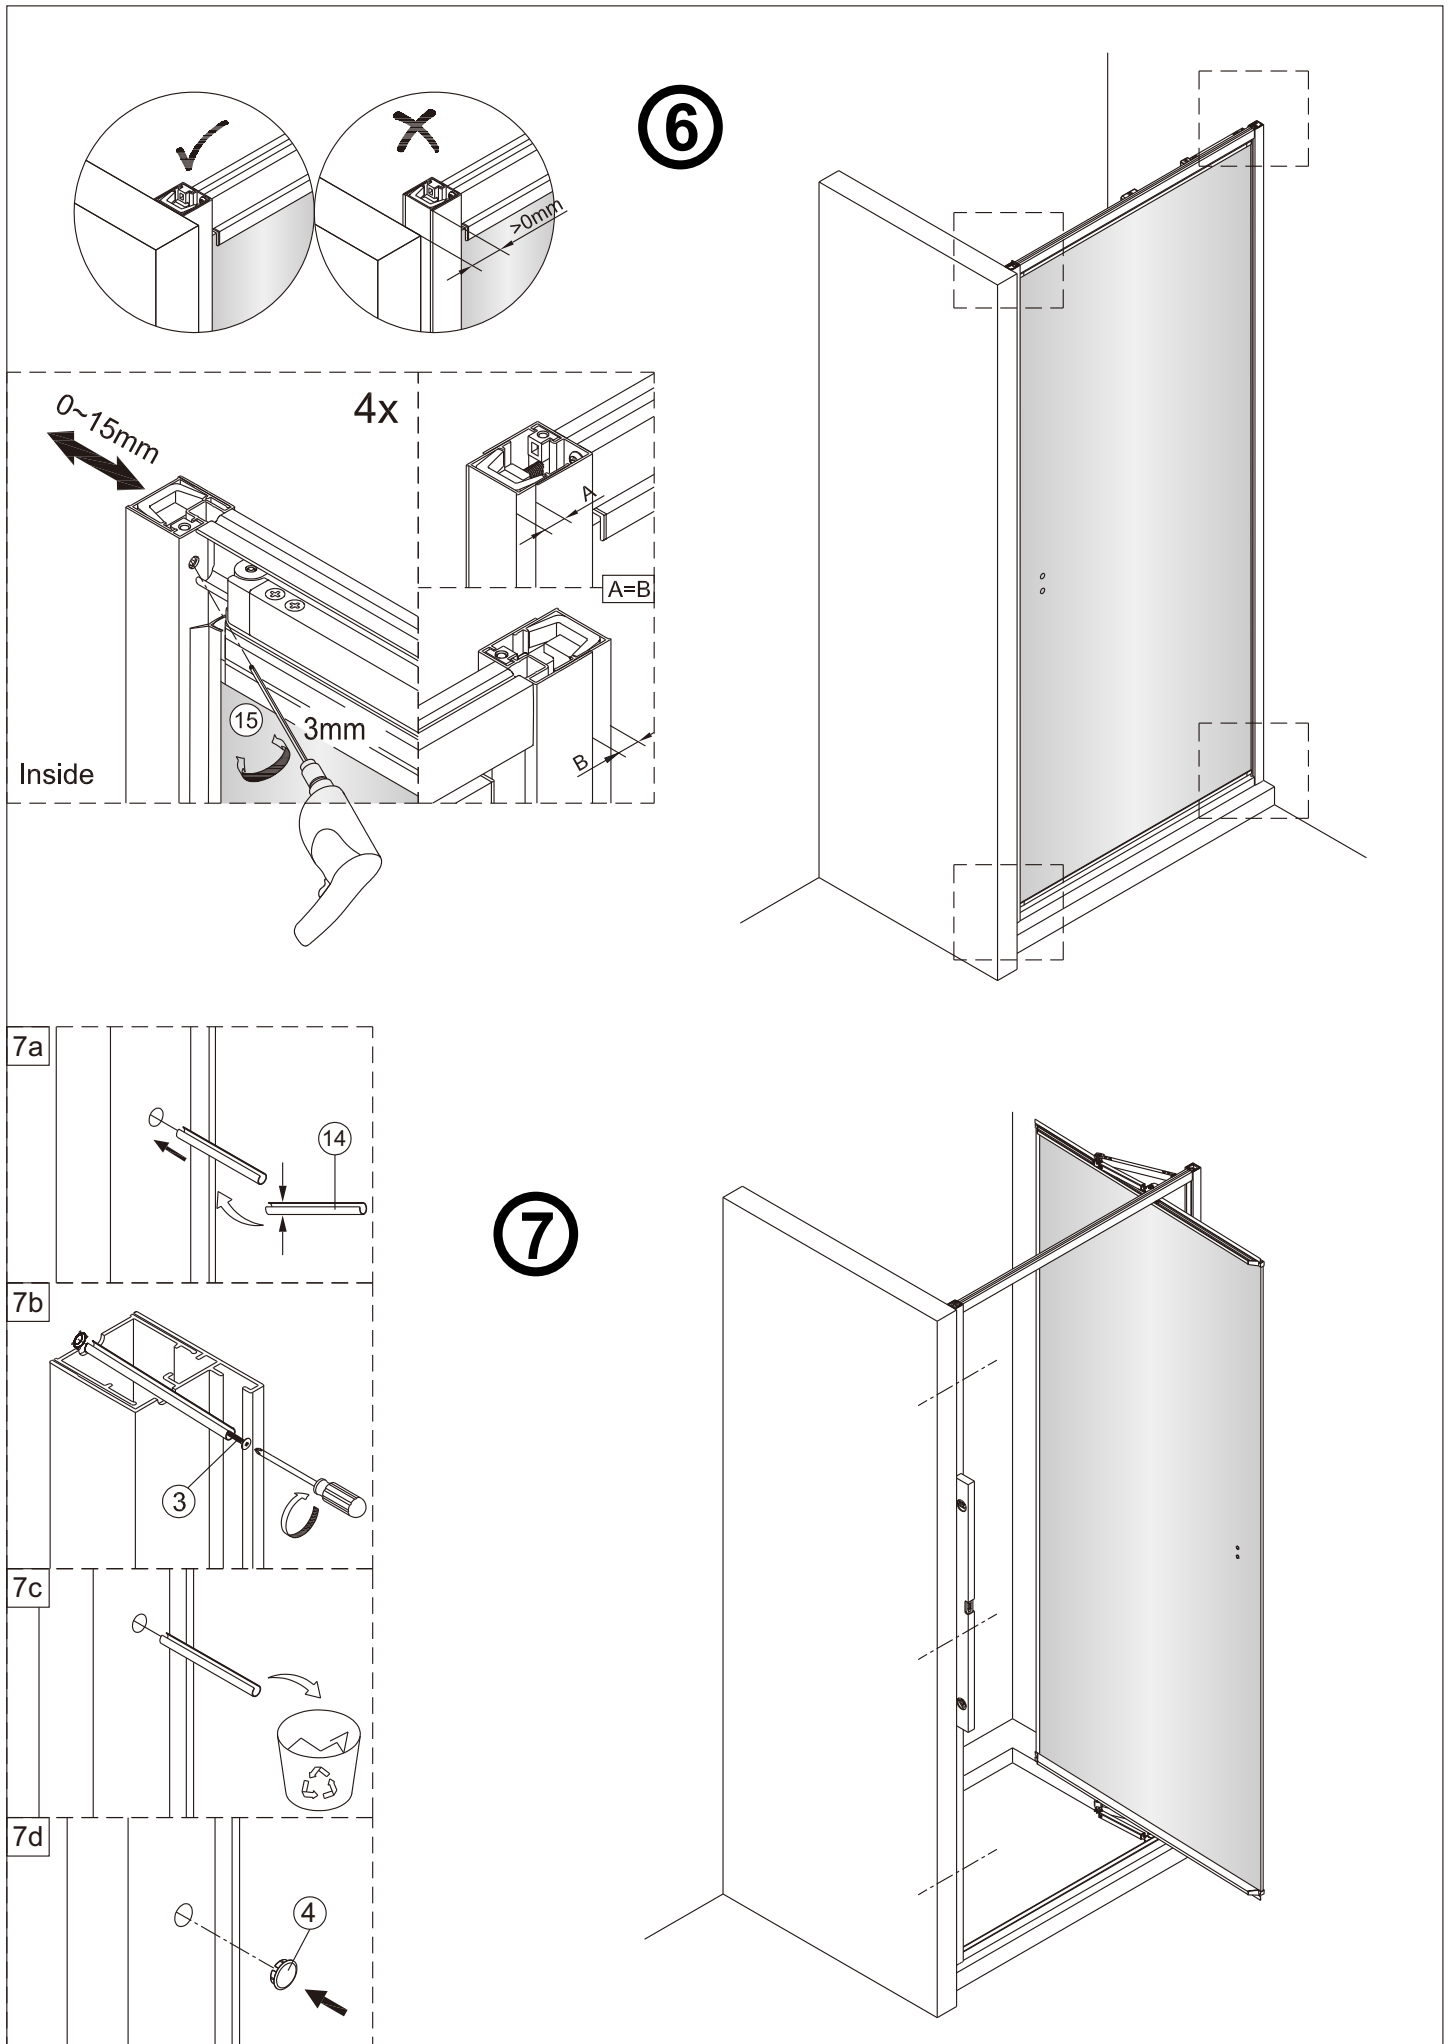


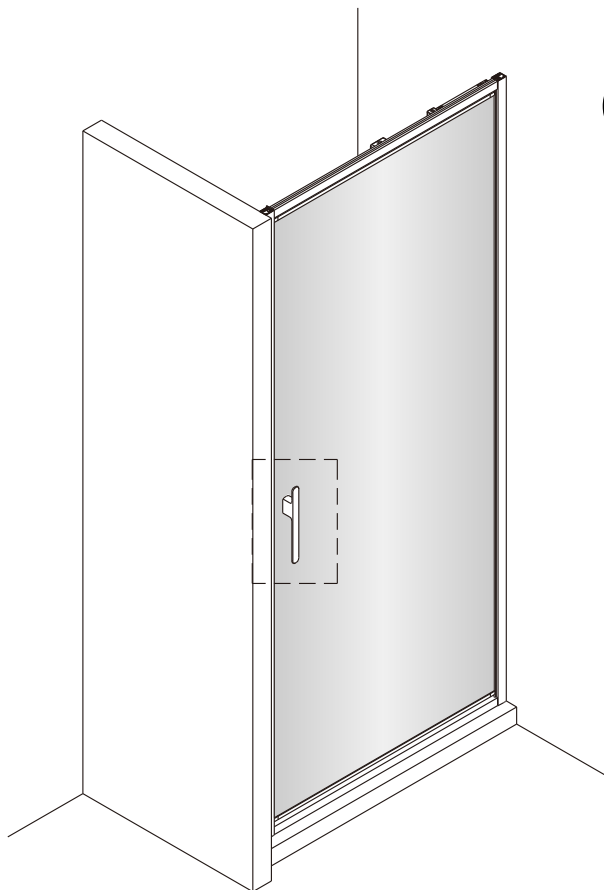



⑧

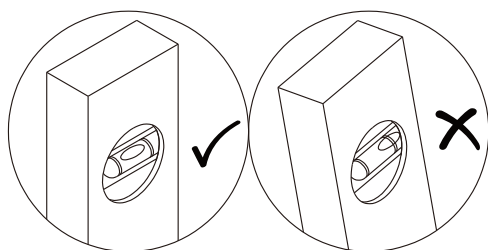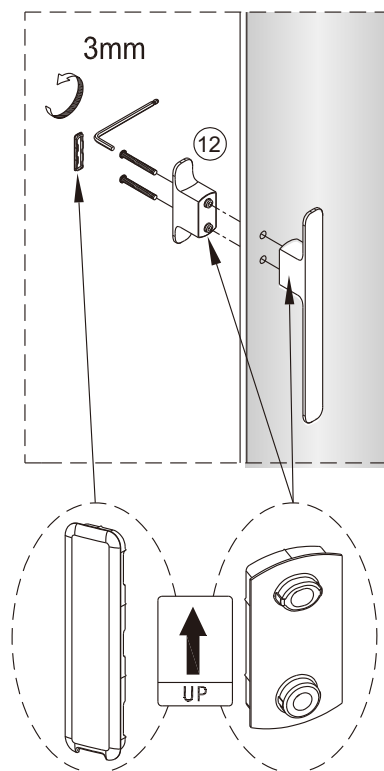

⑨

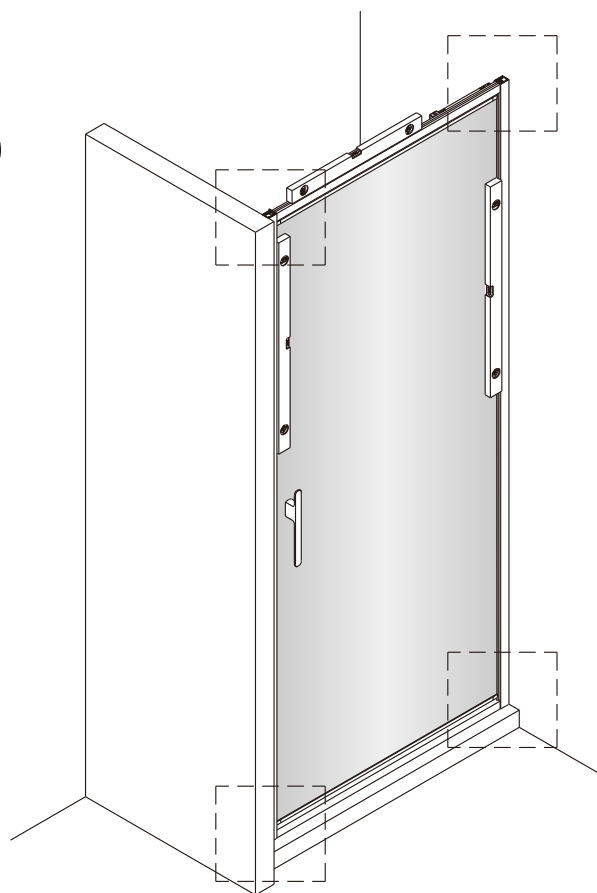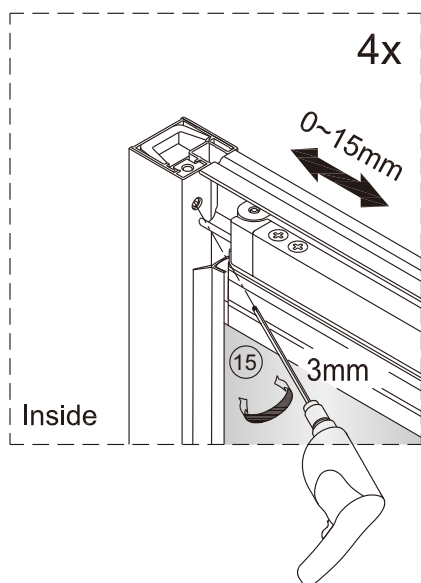


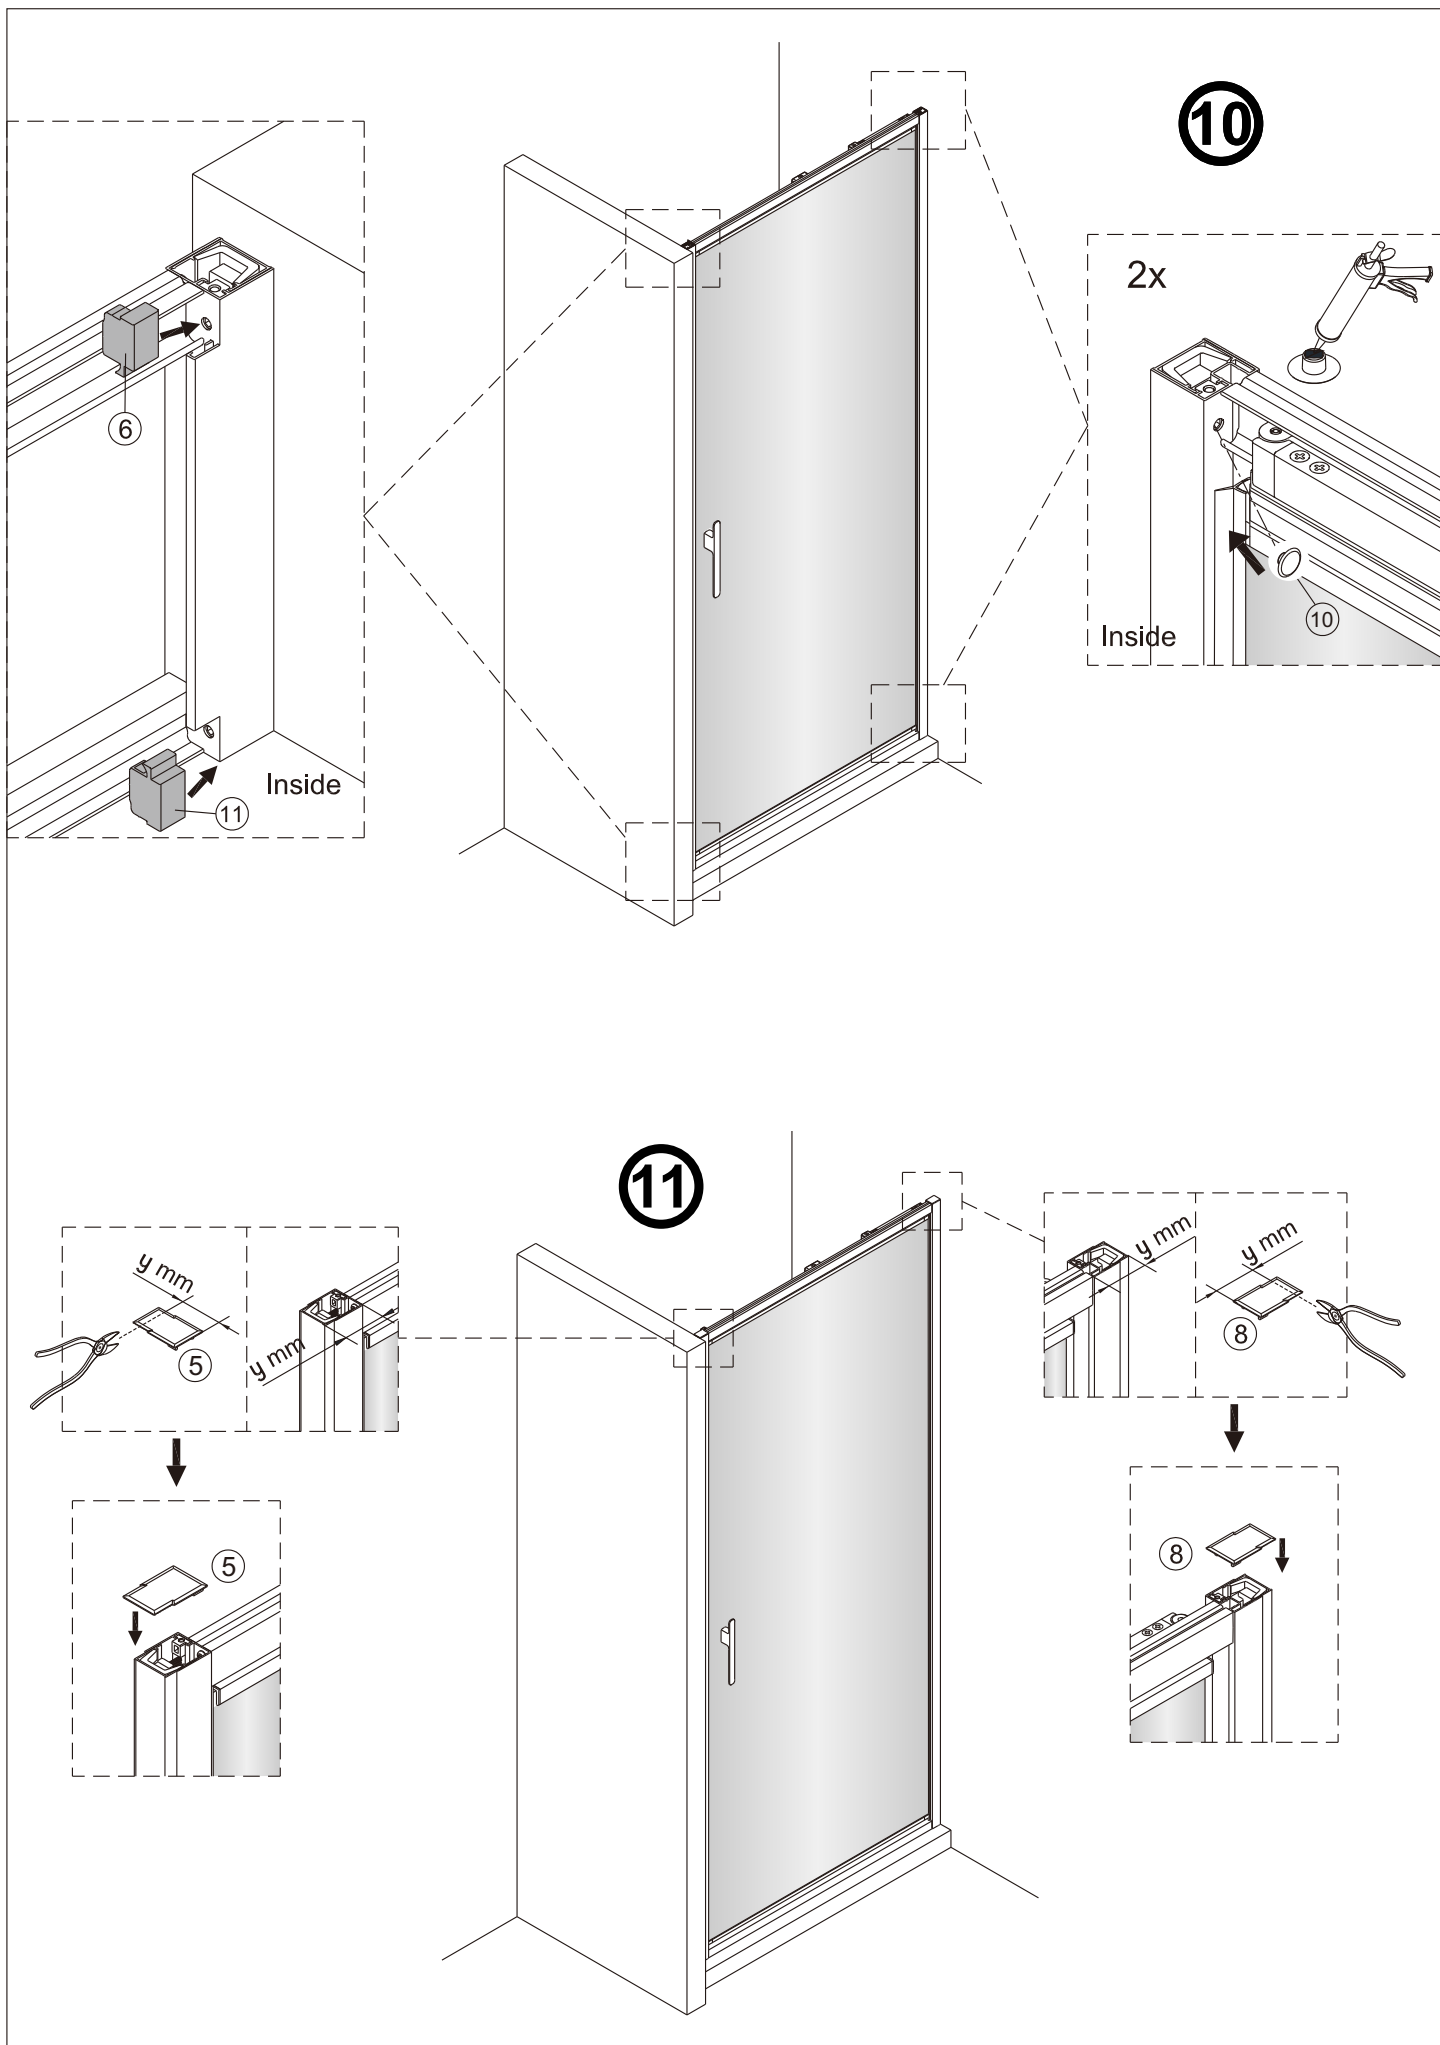



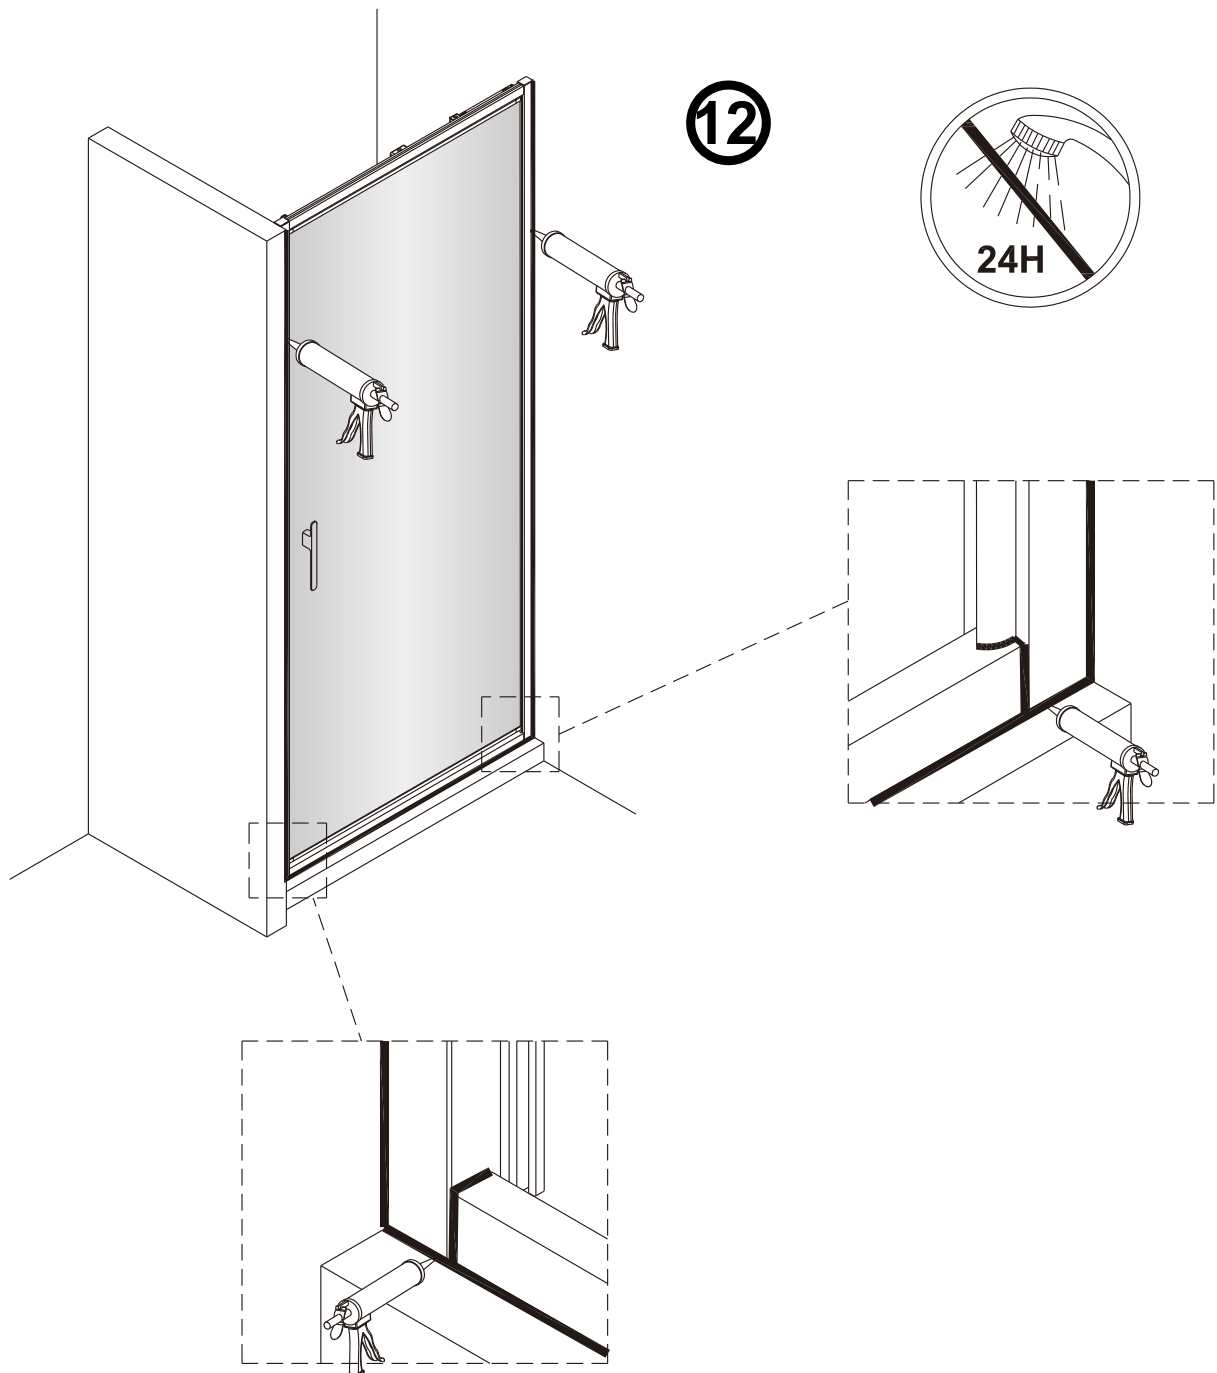


Use of good quality clear sanitary grade and mould resistant silicone sealant. Clean and degrease all joint areas is recommended before application.
 Apply continuous silicone sealant bead as indicated EXTERNALLY ONLY.

SET B

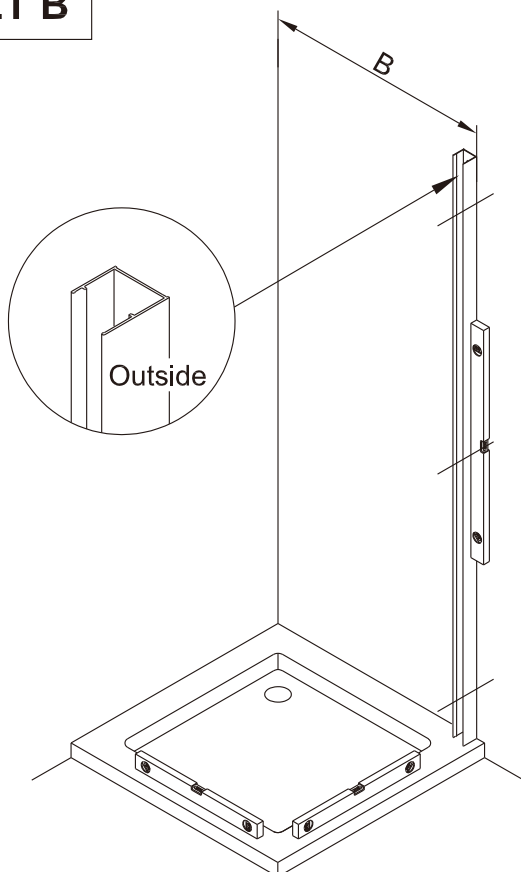


①

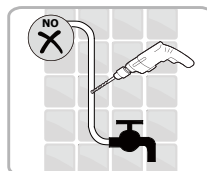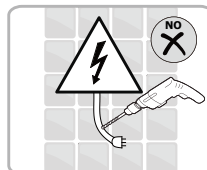
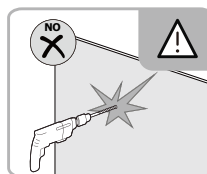


	A(mm)	
	Adjustment	Mid point
LNXI080	759~774	766.5
LNXI090	859~874	866.5
LNXI100	959~974	966.5



	B(mm)	
	Adjustment	Mid point
LNXP080	757~772	764.5
LNXP090	857~872	864.5
LNXP100	957~972	964.5

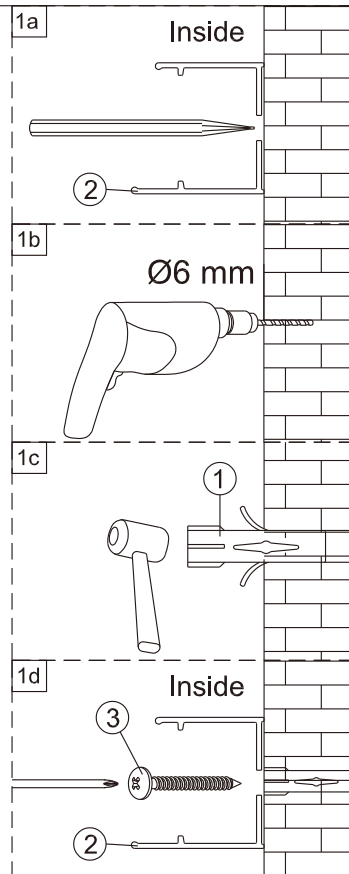



②

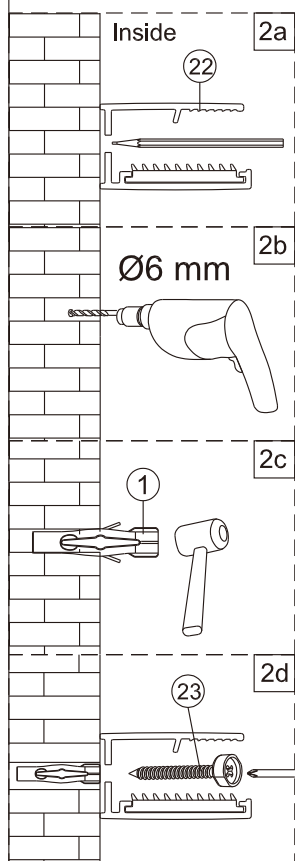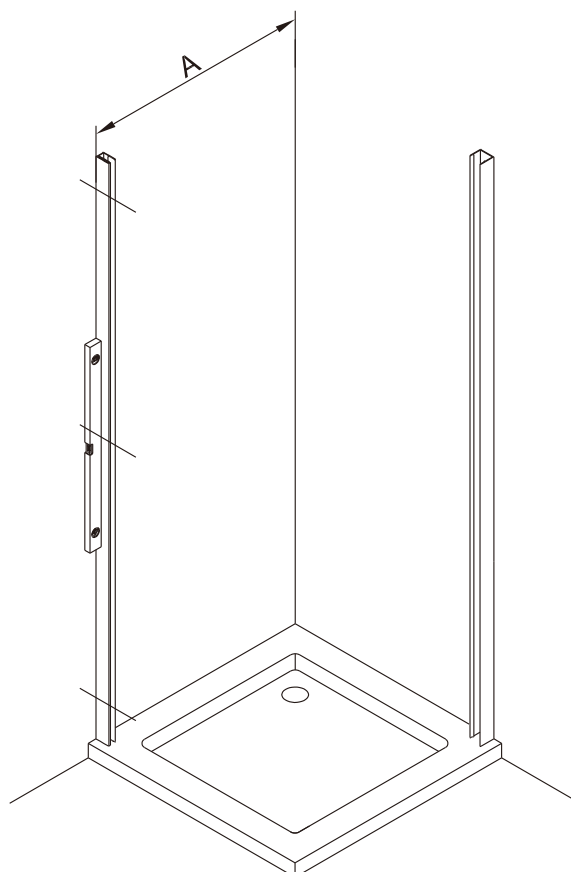




③

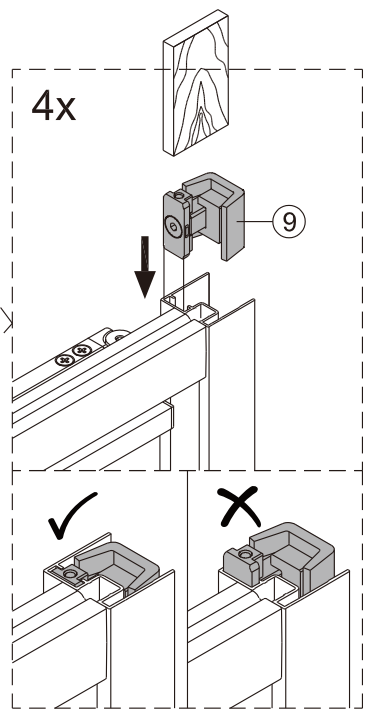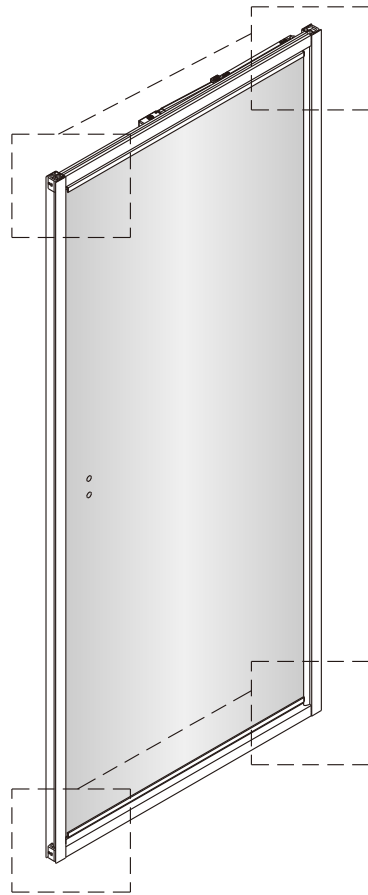


④

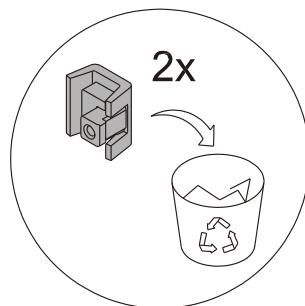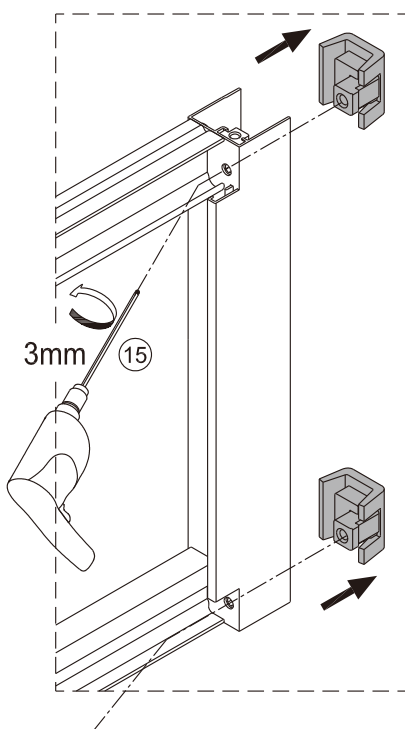










⑤

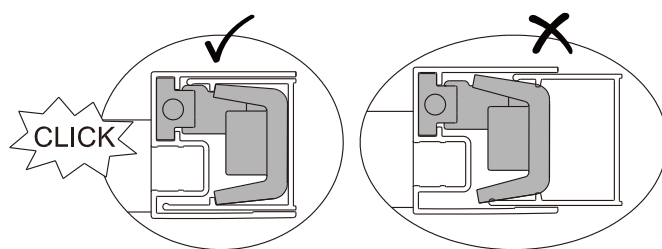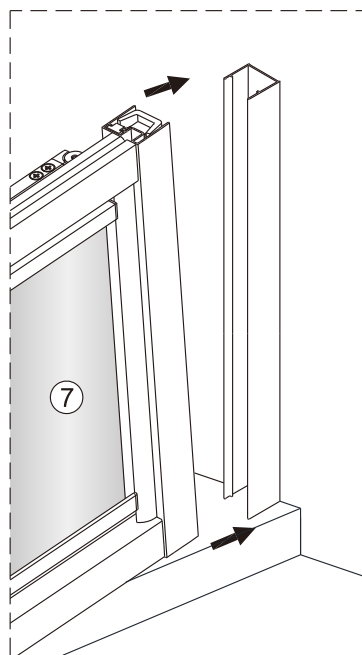
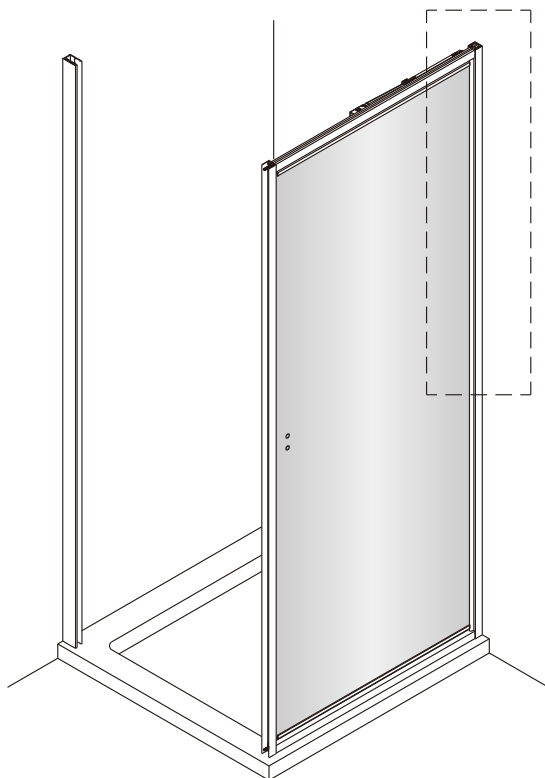



⑥

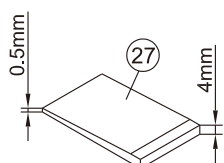


1. The setting wedge (No. 27) will be only needed if the floor is not level within 0.5~4mm.
2. Place the setting wedge at the bottom of the glass, and then cut the excessive part of setting wedge at step 10.

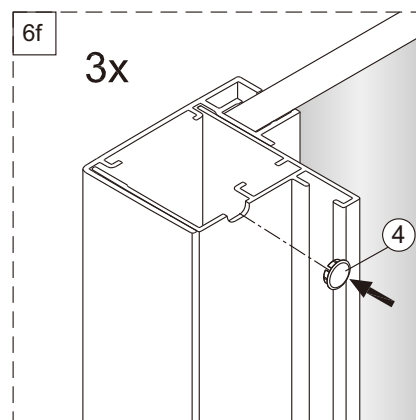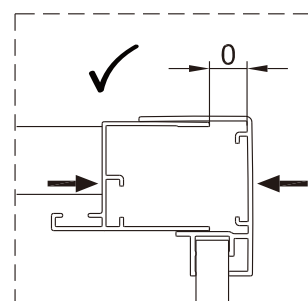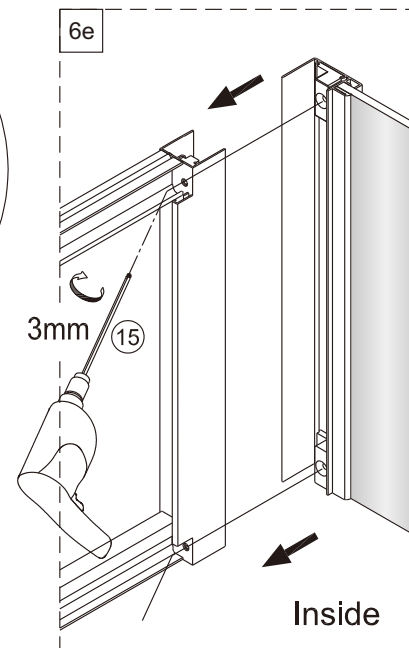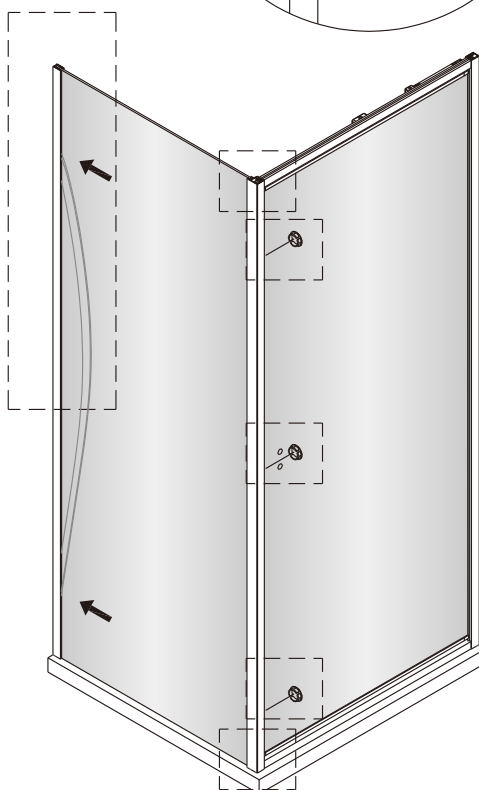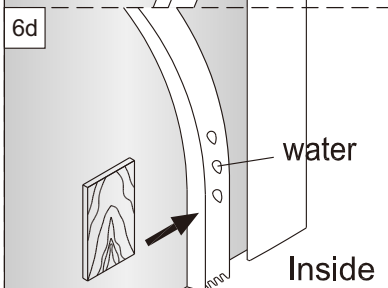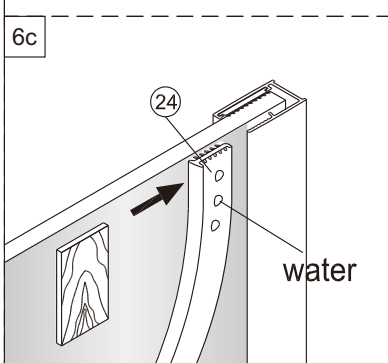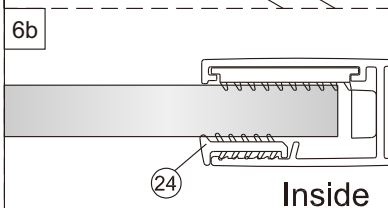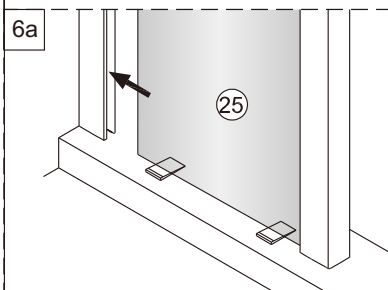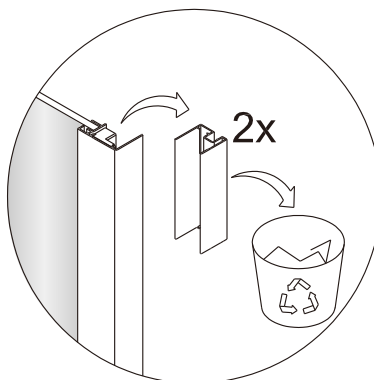

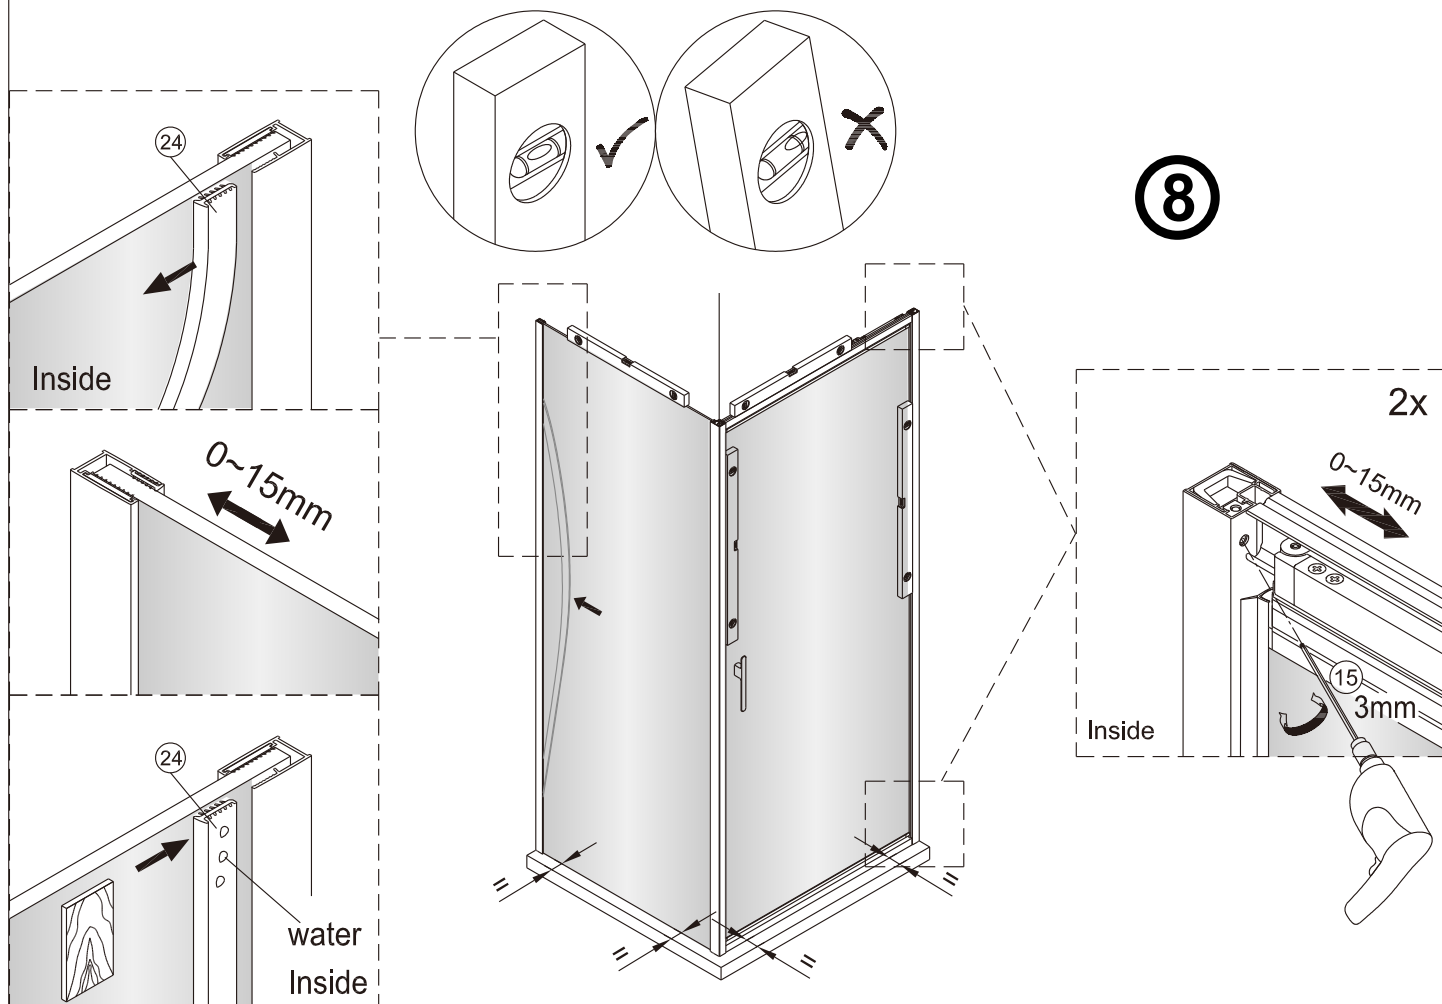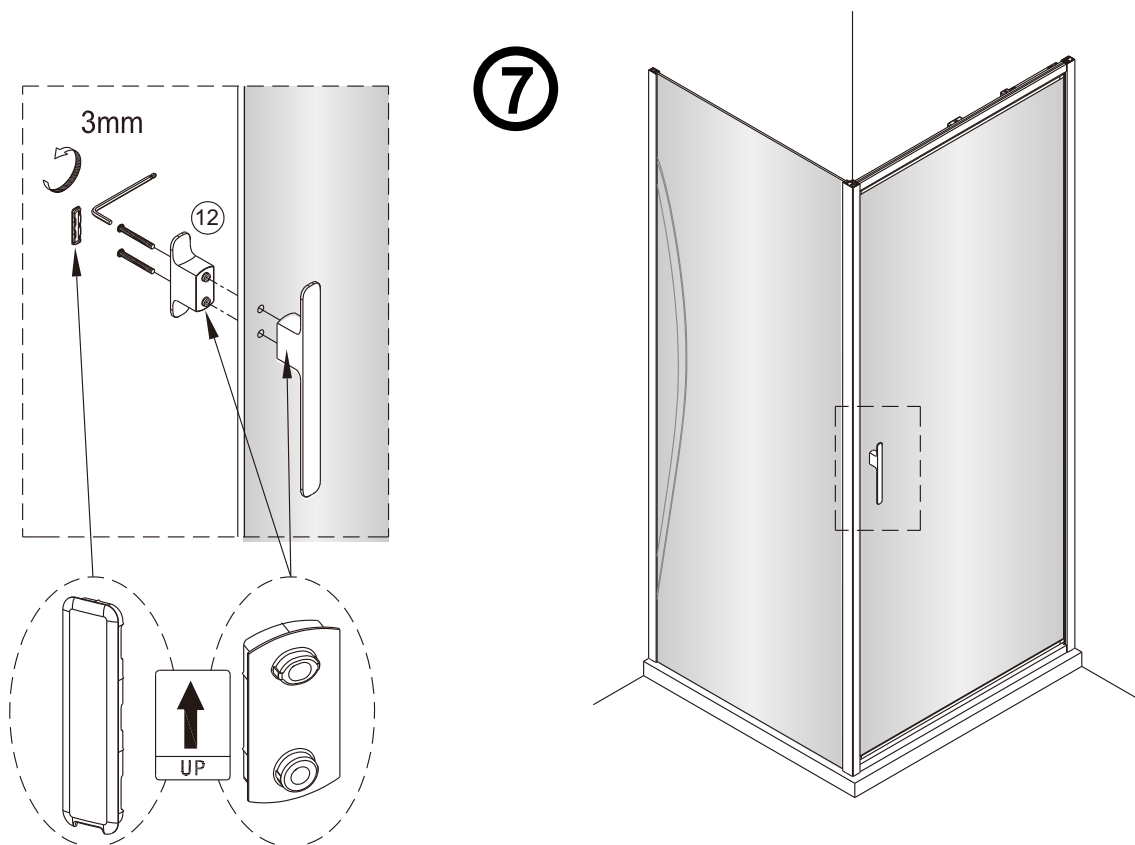

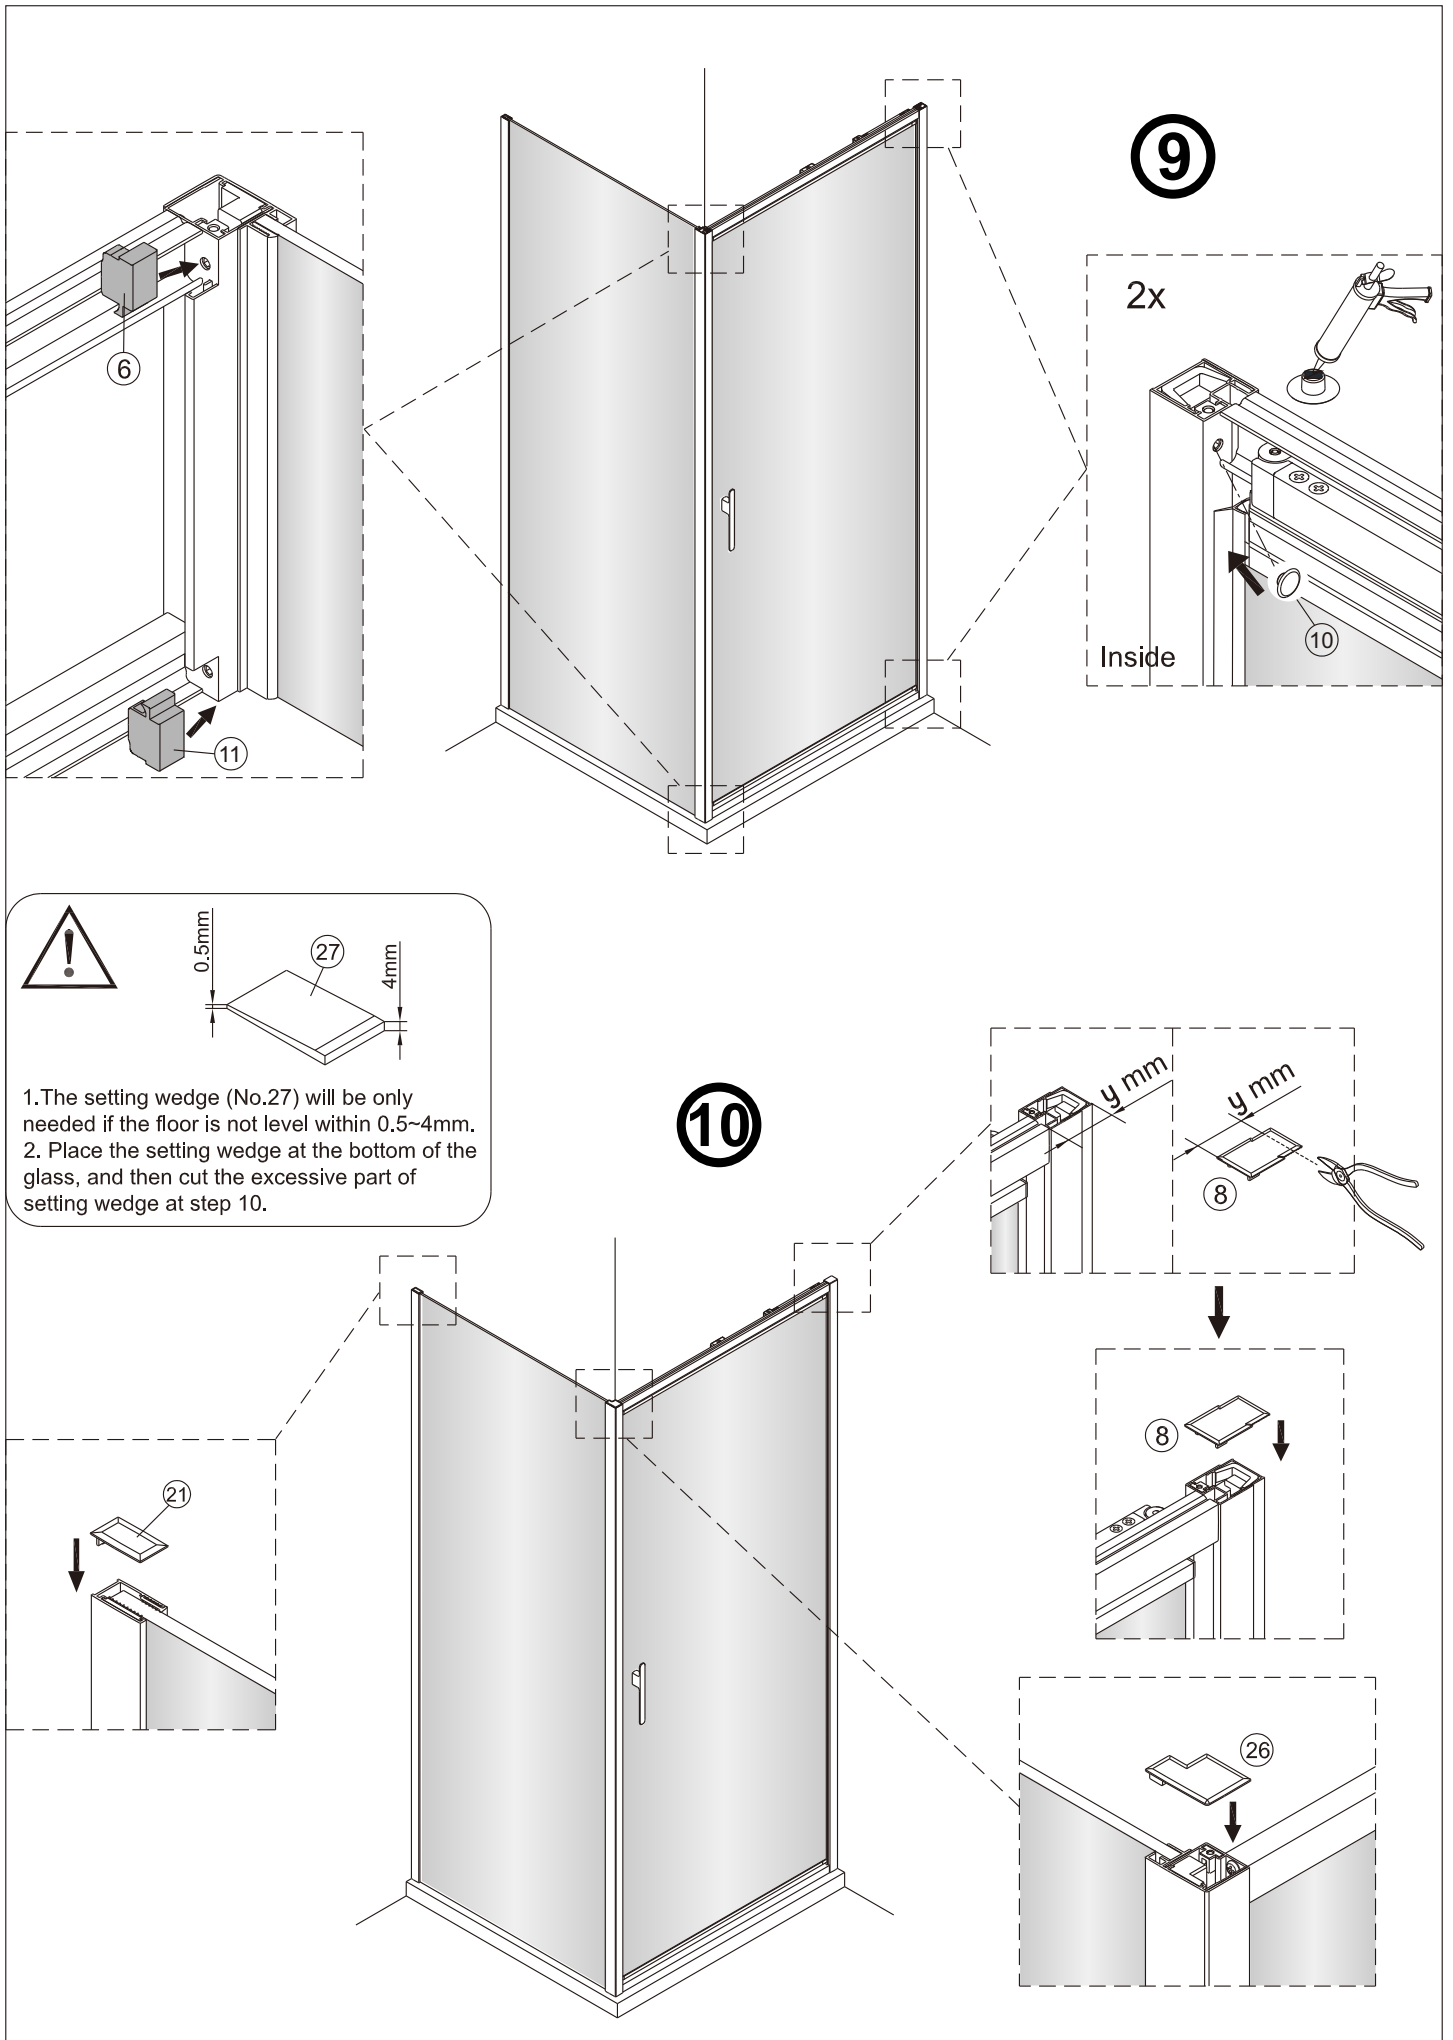

11

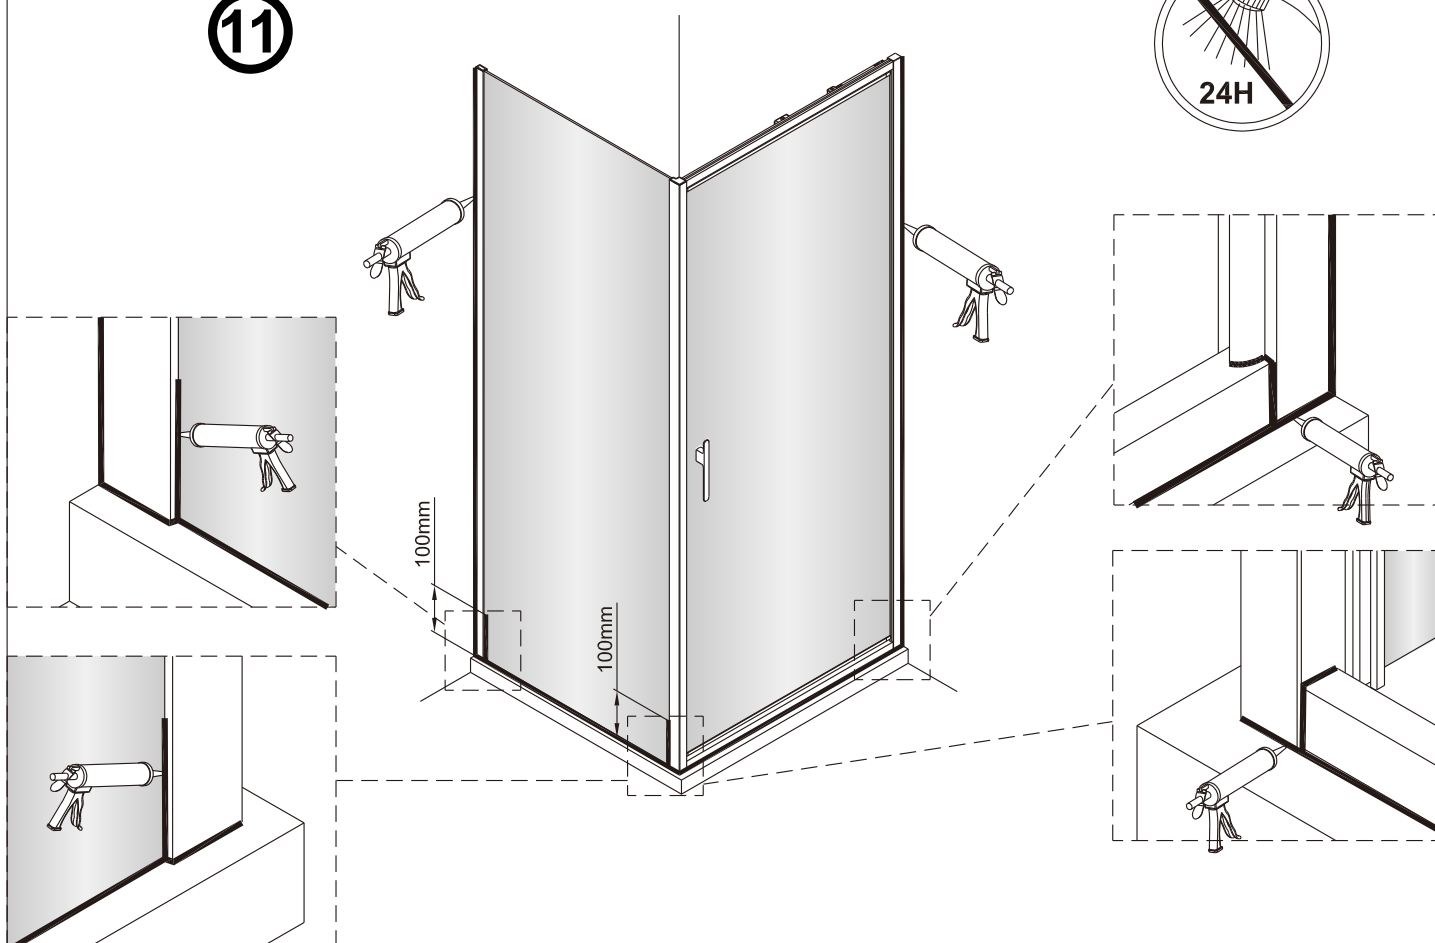

Use of good quality clear sanitary grade and mould resistant silicone sealant. Clean and degrease all joint areas is recommended before application.
Apply continuous silicone sealant bead as indicated EXTERNALLY ONLY.

CARE AND MAINTENANCE

It is essential to clean your shower door after every use.

Use ONLY mild soap / detergent solutions to clean.

Rinse with water, squeegee glass panels & wipe frames dry with a soft cloth.

Under no circumstances should any bathroom/shower or household cleaning products (including “Spray and leave”, abrasive, caustic or corrosive, or scouring products) be used on the enclosure.

Daily Care.

To prevent the build-up of limescale, do not allow water droplets to dry on glass or frames. After showering, rinse with water, remove droplets from glass with a squeegee & wipe frame with a soft cloth.

Limescale

Should a build-up of limescale occur, especially in hardwater areas it can be removed using a 50:50 solution of white vinegar & water applied with a soft cloth & rinsed and dried thoroughly afterwards.

Non-compliance with these instructions will invalidate the warranty and may cause plated / painted / anodised surfaces / finishes to deteriorate & could adversely affect safe operation of the enclosure.

For further information on this product including warranty, spares and troubleshooting visit:
lakesuk.com

Service

England, Scotland, Wales 8.30am—5pm Mon ~ Thurs and 8.30am—4.30pm Fri
Telephone HELPLINE : 01684 853870



Service
01684 853870

www.lakesuk.com

We reserve the right to make technical modifications without prior notice .

03/26 LNX