


Semi Frameless Sliding Door (V2).

Installation / Maintenance Instructions

rev 01.19

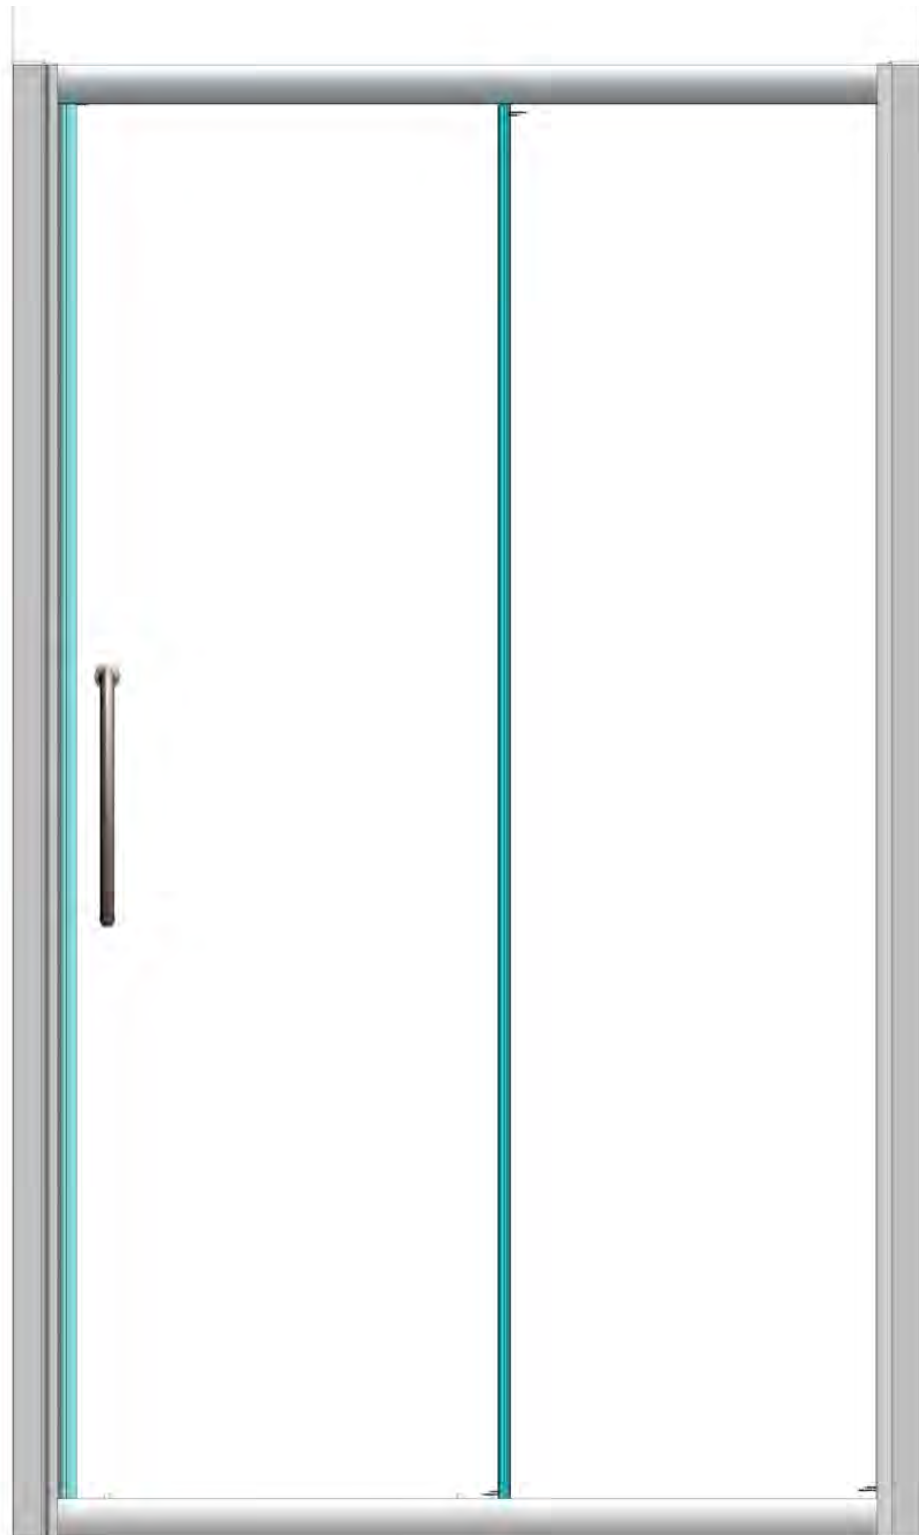

LAKES
SHOWERING SPACES

IMPORTANT NOTES :

Please Read Carefully & retain these instructions for Future Reference.

1. For ease & safety we advise that two persons assemble this product.
2. Protect shower tray surfaces at all times.
3. Exposed glass corners / edges MUST NOT contact hard surfaces at any time.
4. Check for cables, pipes etc before drilling walls.
5. Ensure all surfaces are dry, clean & free of loose debris / dust.
6. Unpack goods with care (small parts can become lodged in packaging & inadvertently discarded). Check parts supplied against parts & fittings listed herein. Damaged parts / omissions may be resolved by calling Lakes Bathrooms Helpline.
7. Whilst precautions are taken in manufacture, care must be taken when handling as rail ends may have sharp edges.
8. Before commencing, check :
 - a) shower tray (or base) is level & completely sealed to finished / tiled walls.
 - b) finished walls are sound & free of cracks, loose tiles / grout.
8. AFTER INSTALLATION, DO NOT 'WET' ENCLOSURE FOR 48 HOURS TO ENSURE FULL CURE OF SILICONE SEALANT.

USE :

General Care & Maintenance.

Provided this product is installed & operated in accordance with these instructions, problems should not arise. However should maintenance be required it should be carried out by a competent person with reference to these instructions. Before any work is carried out the root cause of the problem must be identified. Lakes Bathrooms service engineers are available if necessary to consult / carry out remedial work. Call Lakes Bathrooms HELPLINE.

Cleaning.

(Every one to two weeks depending on local water {hardness} conditions).

All glass panels in this product have a hydrophobic coating aiding 'runoff' of water droplets, reducing the need for frequent cleaning. For best appearance / product life however, regular cleaning is recommended.

Use ONLY mild soap / detergent solutions to clean. Rinse with water, squeegee glass panels & wipe frames dry with a soft cloth. Under no circumstances should abrasive, caustic or scouring products be used. Non compliance with these cleaning instructions may cause decorative finishes to deteriorate & could adversely affect safe operation of the enclosure.

Daily Care.

To prevent the build up of limescale, do not allow water droplets to dry on glass or frames. After showering, rinse with water, remove droplets from glass with a squeegee & wipe frame with a soft cloth.

Customer Service.

Quality Guarantee : Lakes Bathrooms Ltd guarantee Shower Doors & Enclosures against any manufacturing or material defects for the lifetime of the product. We will resolve defects free of charge by repairing / replacing parts as we feel necessary. To be 'free of charge' service work must be carried out by Lakes Bathrooms or approved agents.



Seals are considered 'wear & tear' parts, as such they are guaranteed for 12 months from purchase. Not Covered by this Guarantee : Damage or defects that result from improper installation, improper use, or lack of maintenance (including limescale buildup). Damage or defects that result from repairs / modifications undertaken by unauthorized persons. This guarantee is in addition to statutory & other legal rights.

What to do if something goes wrong : Should the product not function correctly on initial use, firstly, contact the installer to check that unit installation & commissioning are in accordance with these instructions. Should this not resolve difficulties or should performance decline, consult 'Troubleshooting' section to see if simple home maintenance is needed. Alternatively our HELPLINE staff can assist, or if necessary arrange for a service engineer to visit.


Spares : We maintain extensive spare part stocks. Spares can be ordered / purchased from your retailer in the first instance. Parts will normally be dispatched within two working days from order placement.

SUPPLIED PARTS : 1000 to 1200mm

Main Panel Sub Assy 1x
(Fig B) (comprising):

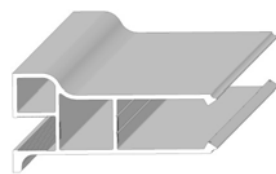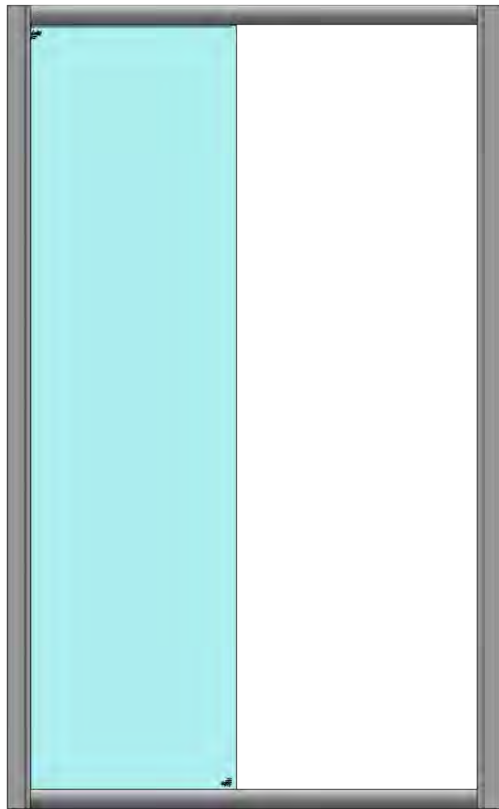

Vertical Frame Rail (panel side)
(1850mm 1x)

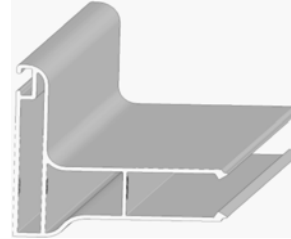


Vertical Frame Rail (door side)
(1850mm 1x)




Horizontal Frame Rail
(handed pair)




3,5 x 40 long self tapping screw (8x)




Vertical Glazing Seal (1x)



Horizontal Glazing Seal (2x)



Glazing Block
(handed pair)

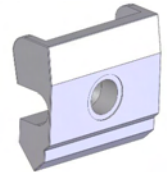

Doorstop Block (2x)



Decorative Screw Cover Cap (4x)



3,5 x 12 long Csk Head self tapping screw (2x)




3,5 x 10 long Pan Head self tapping screw (2x)



Doorstop Buffer (2x)



Door Glass (1x)
fig C

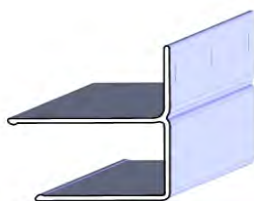

Wall Rail 1850mm
(2x) Fig A / D




Handle Kit
(1x) fig C




Top Cap (Vertical rail)
(handed pair)




Top Cap (Vertical rail)
(handed pair)




Top Cap (Wall rail)
(handed pair)



Door Magnetic Seal fig E




Edge Seals (fig E)
1817mm
1750mm



Frame Magnetic Seal fig B



single

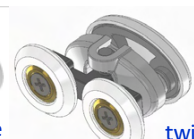

twin

Top Wheel Assy
(4x) fig C



single



twin

Bottom Wheel Assy
(4x) fig C



3,5 x 10 long Pan Head self tapping screw (6x) fig D



Cup Washer (12x) fig A / D



Decorative Screw Cover Cap (12x) fig D





4 x 45 long self tapping screw (6x) Fig A / D




7,5 x 39mm Wall Plug (6x) Fig A / D

SUPPLIED PARTS : 1400 to 2000mm

Panel Glass Sub Assy 1x
Fig B)

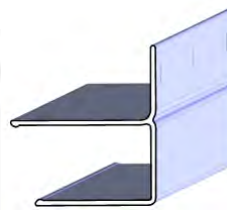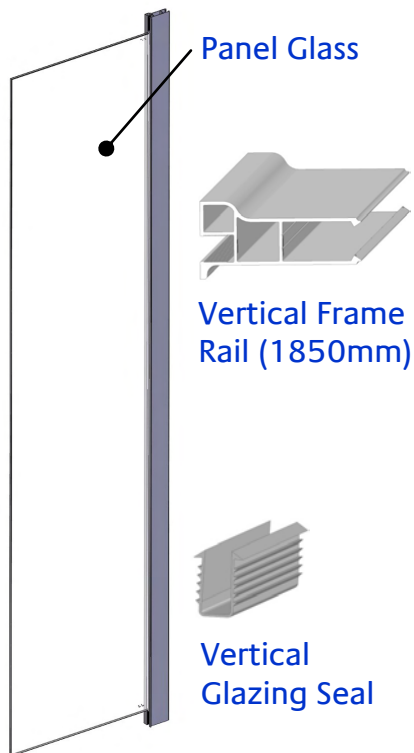


Wall Rail
1850mm
(2x) Fig A

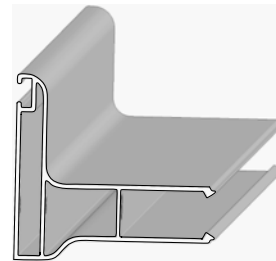


Vertical Frame
Rail (1850mm)
Fig B




Horizontal
Rail
(2x) fig B




Frame Magnetic
Seal fig B




Door Magnetic
Seal fig E



Edge Seals
1817mm
1750mm fig E




Horizontal
Glazing
Seal (2x) fig B

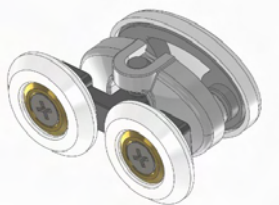

Top Wheel Assy (2x)
fig C



Bottom Wheel Assy (2x)
fig C




Top Cap (Wall Profile)
(handed pair) fig F



Top Cap (Vertical Profile)
(handed pair) fig F




Top Cap (Vertical Profile)
(handed pair) fig F

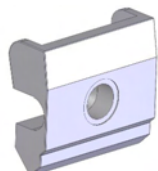

Doorstop
Block (2x)



Doorstop
Buffer (2x)



Glazing Block
(handed pair) fig B



Handle Kit
fig C



3,5 x 40 long self tapping
screw (8x) fig B



4 x 45 long self tapping
screw (6x) Fig A



7,5 x 39mm Wall Plug(6x) Fig A



3,5 x 12 long CSK self tapping screw
(4x) fig B & F



3,5 x 10 long Pan Head self tapping
screw (6x) fig H



Cup Washer (12x) fig C




Decorative Screw Cover Cap (12x) fig C




Decorative Screw Cover Cap (4x) fig B

Size ref	Adjustment Range (Dim'n A)	Remark	Wheel
1000mm	940 to 1000mm	Fully Assembled	Single
1100mm	1040 to 1100mm		
1200mm	1140 to 1200mm		
1400mm	1340 to 1400mm	Kitted	Twin
1500mm	1440 to 1500mm		
1600mm	1540 to 1600mm		
1700mm	1640 to 1700mm		
1800mm	1740 to 1800mm		
2000mm	1940 to 2000mm		

Tools Required



Spirit Level (with vertical 'bubble')



Tape Measure




Power drill &
8mm masonry bit



Pencil




Pozi drive
Screwdriver

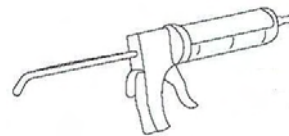

Good quality silicone
sealant & applicator




3mm HSS
drill bit


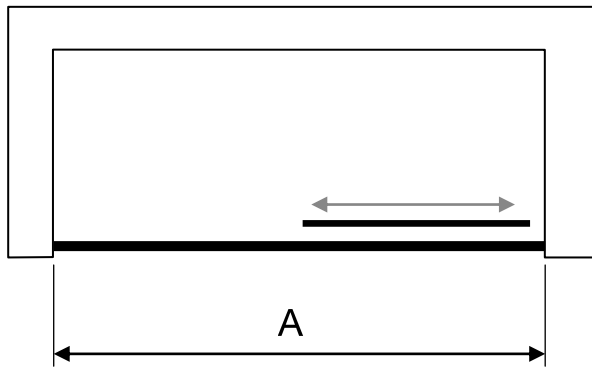


Ensure tray is correctly levelled & that tray / wall (tile) joints are sealed & cured over entire length of tray sides (See Fig A) prior to fitting enclosure.
DO NOT SEAL TRAY EDGES UPTO A FITTED ENCLOSURE !

A

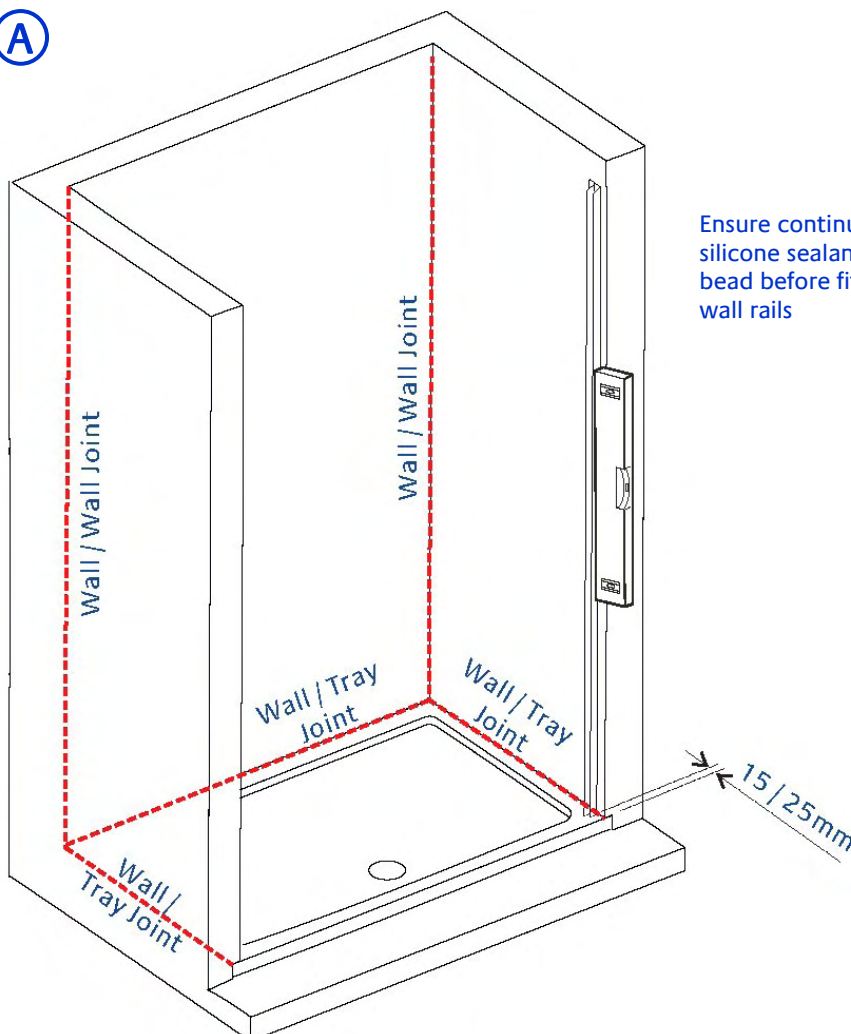


Ensure continuous
silicone sealant
bead before fitting
wall rails

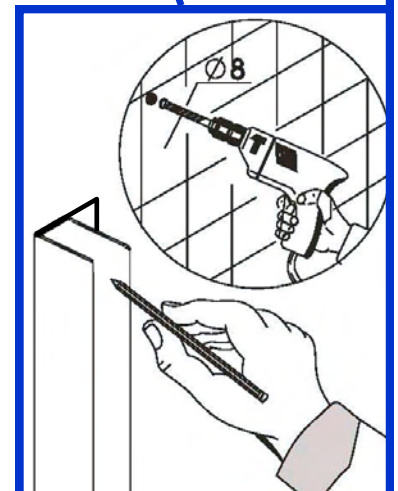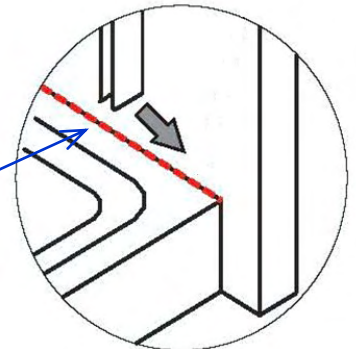

Measure & mark wall rail positions. Drill & plug walls. Having decided required handing, FIT DOOR SIDE WALL RAIL ONLY AT THIS STAGE.



MAIN FRAME SUB ASSEMBLY: (Kitted models)

(B)

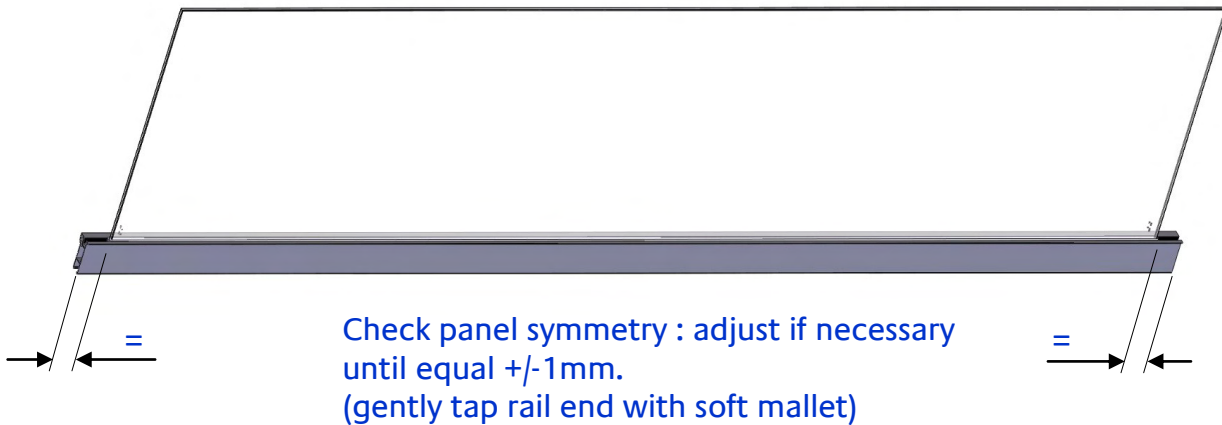


1. Fit horizontal glazing seals to top & bottom edges of panel glass. Ensure seal is pushed up against vertical rail. (Note, horizontal seal may be omitted from top of frame for ease of construction).
2. Align horizontal rail & affix with 3,5 x 40 long screws (2 per corner).
3. On tightening screws, ensure Gaskets are not 'pinched' in joint between rails.

Seals may be 'wetted' to ease assembly.

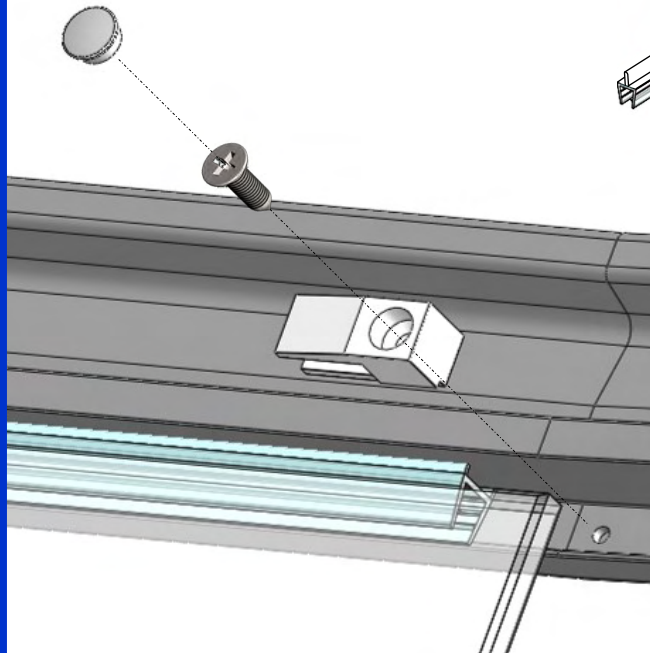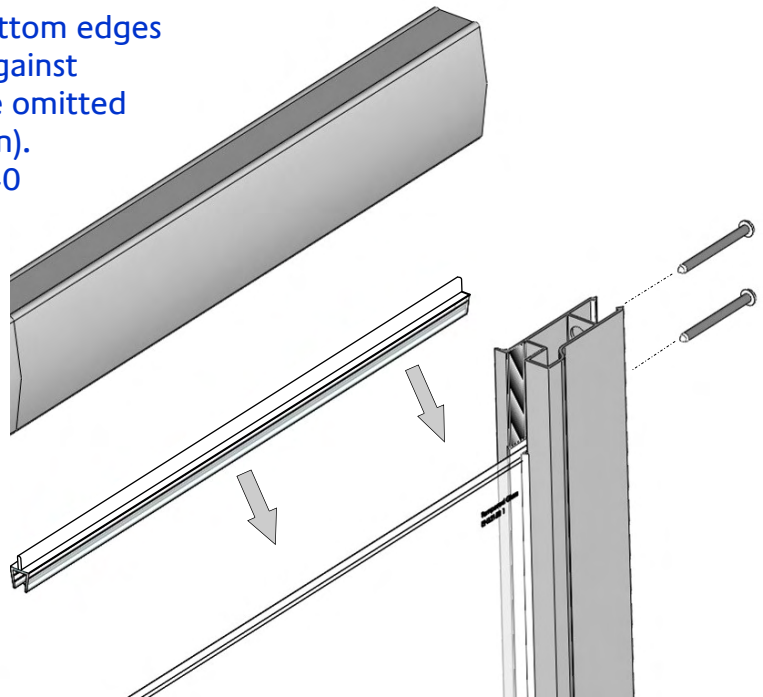

4. Align & fit glazing blocks with 3,5 x 12 long screws & fit decorative cover caps (2 places).

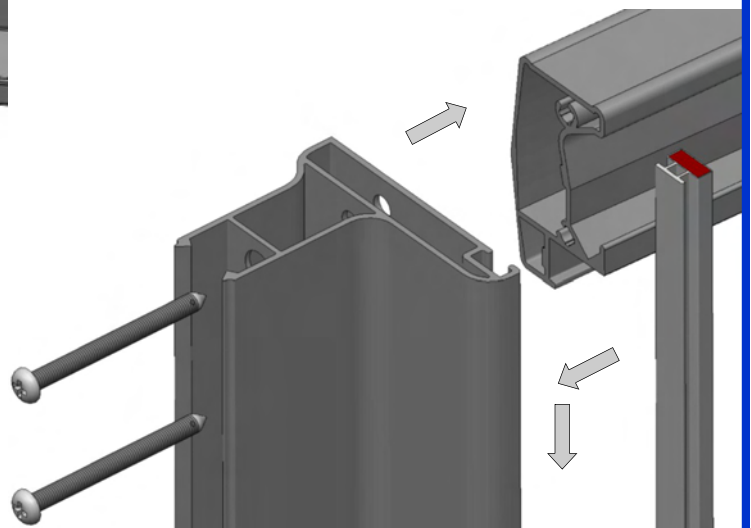

5. Align horizontal rail & affix with 3,5 x 40 long screws (2 per corner).
6. Slide frame magnet into vertical rail.

DOOR ASSEMBLIES :

Wheels must be fitted to top & bottom of door glass as shown.


©

Right Hand

Left Hand



Loosely fit top wheels at this stage (adjusting screw head to underside). Ensure screws are engaged in body, but do not tighten fully & do not fit cover.

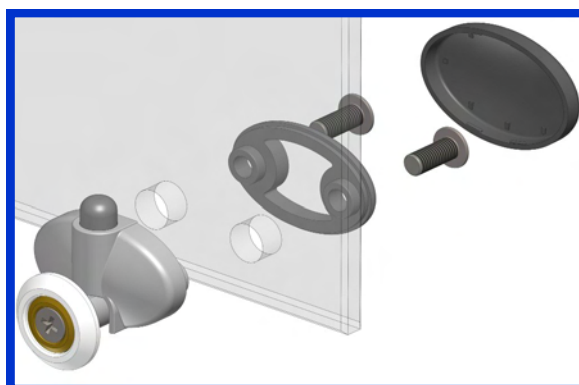


Fit & fully tighten bottom wheel, including cover



MAIN FRAME SETUP :

Ⓓ


1. Fit panel side wall rail fully onto panel side of frame.
2. Keeping frame upright, lift over tray & insert into fixed wall rail.
3. Push panel end back, align & fix wall rail to wall with 4 x 45 long screws & cup washers.

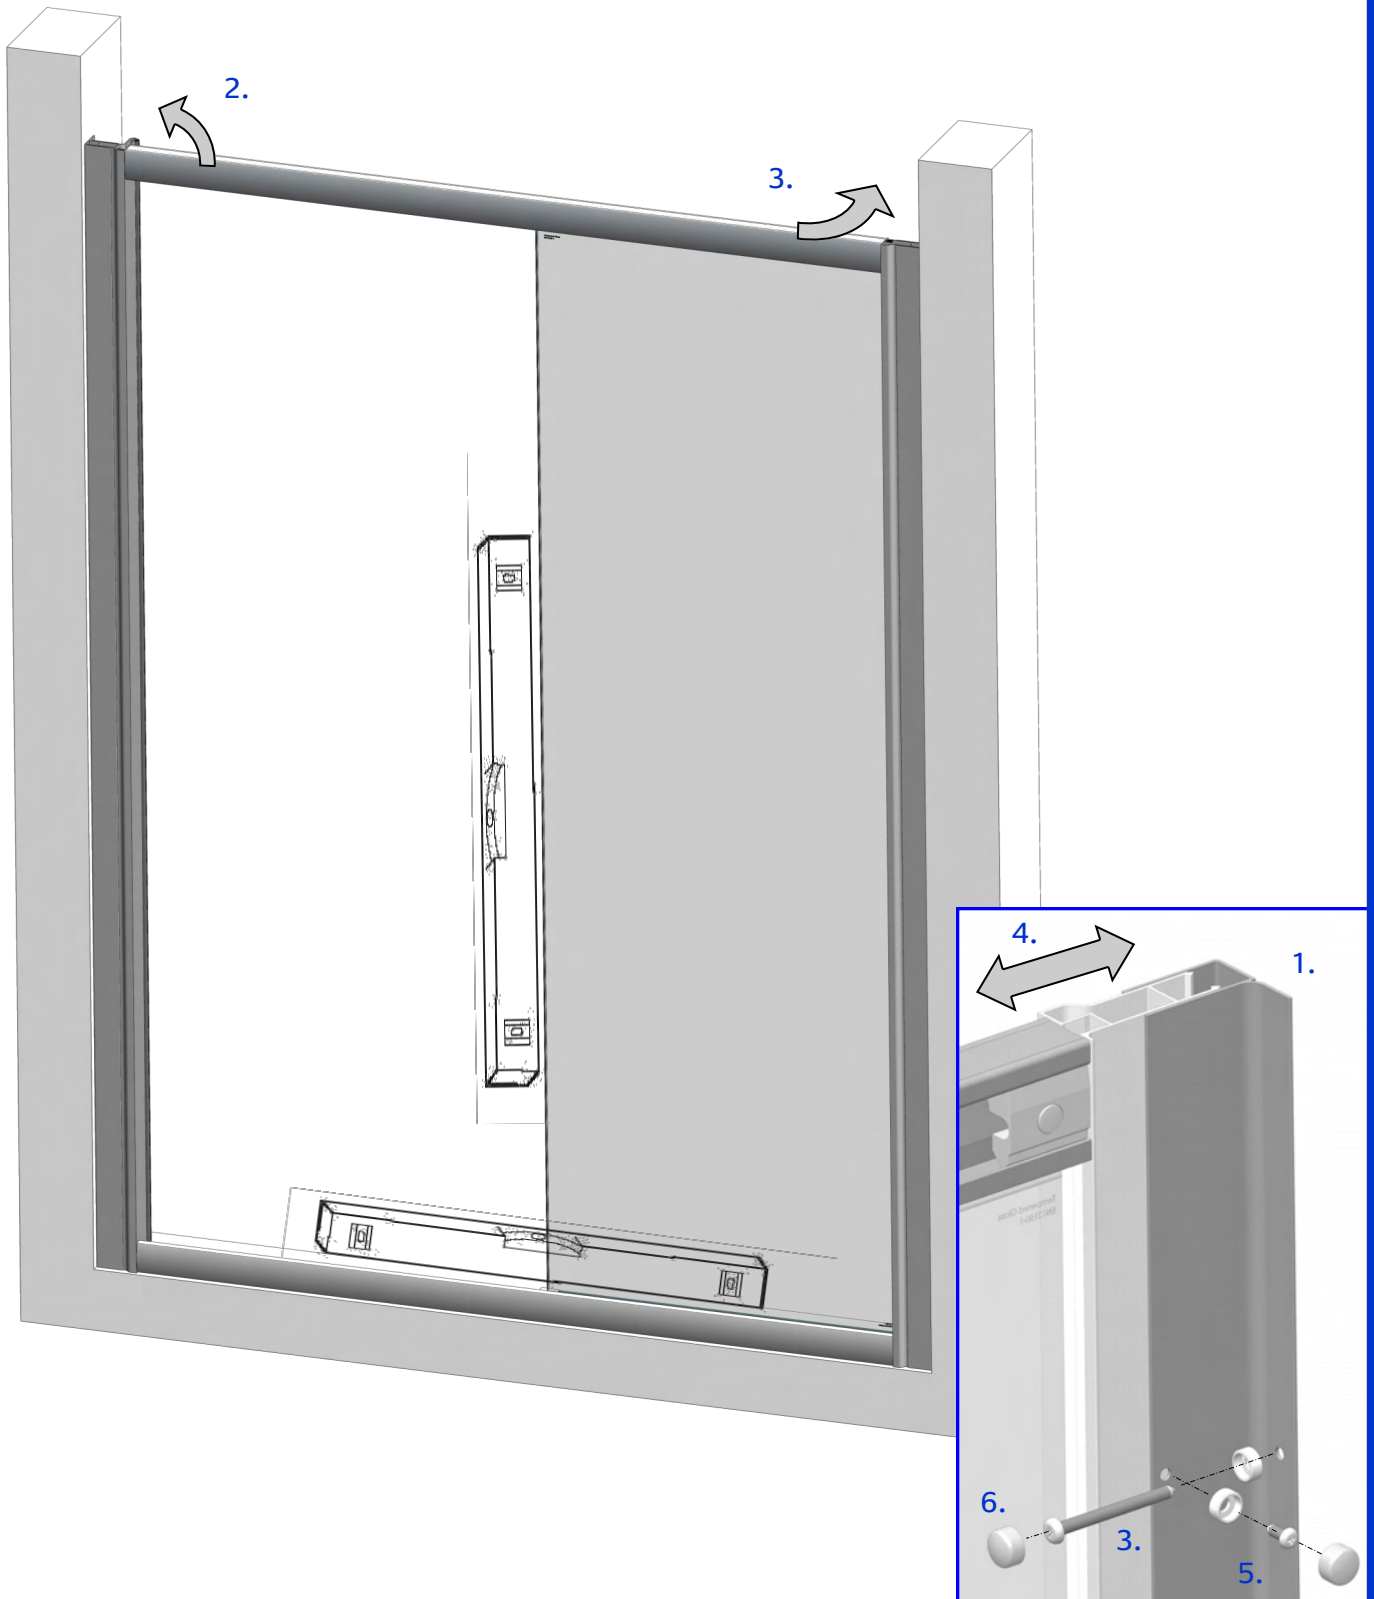


4. Manipulate frame within wall profiles until centred & ensure frame is completely plumb.
5. From inside enclosure, using the wall profile holes as a guide, drill (3mm) & screw frame to wall profiles using 3,5 x 10mm screws & cup washers.
6. Fit all decorative caps (12 places total).

DOOR HANGING & SEALS :


(E)

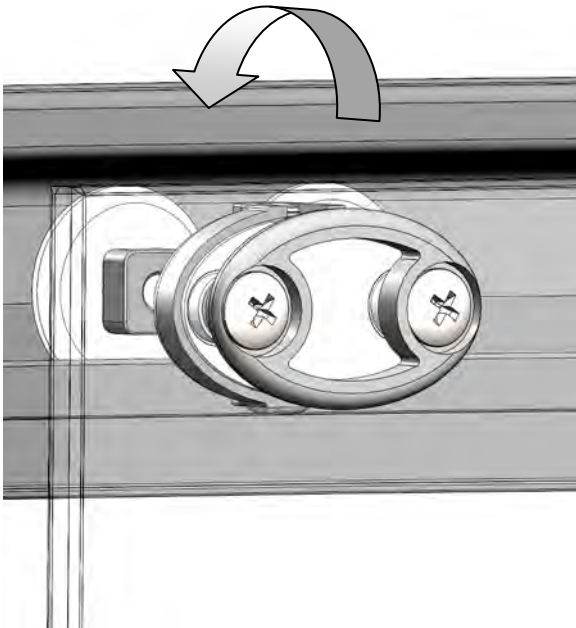


With wheel body loose on glass (screws engaged but not tightened) lift door & engage wheels in top rail & immediately tighten clamping screws.

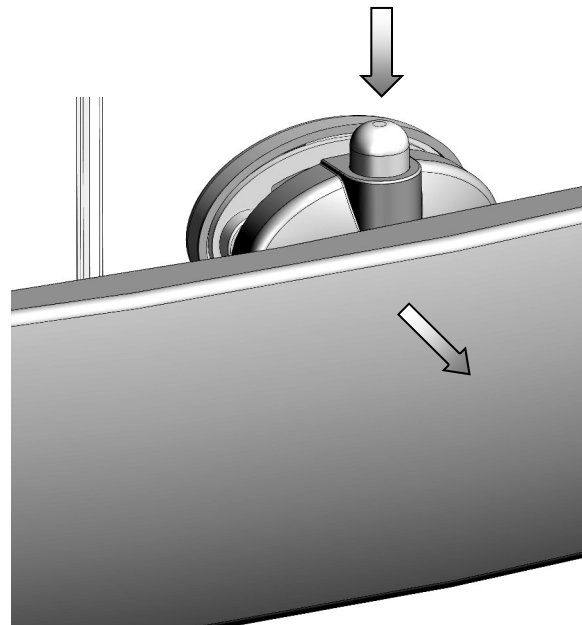

Using buttons, engage bottom wheels in bottom rail.

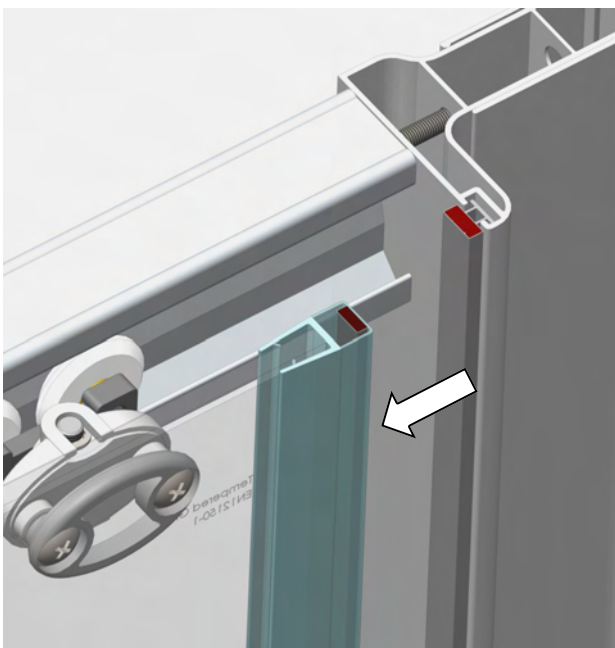

Fit magnetic seal to leading edge of door.


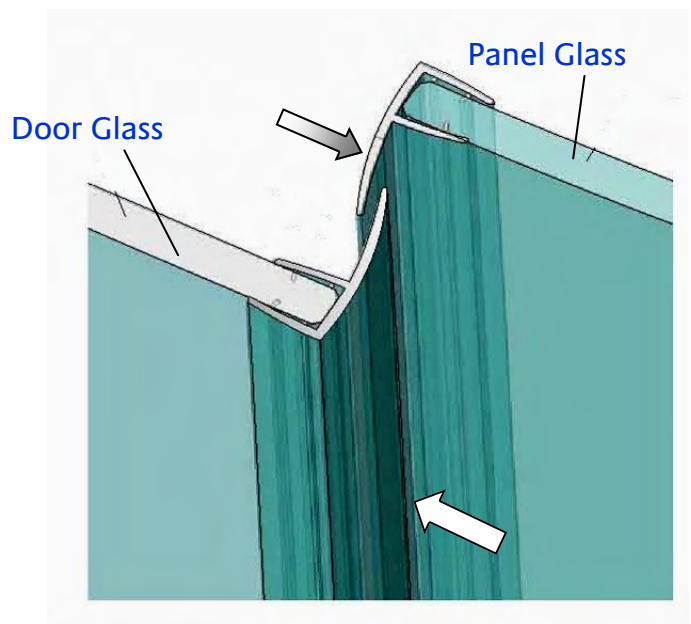


Fit edge seals to trailing edge of door & leading edge of fixed panel.

Seals may be 'Wetted' to ease assembly.

DOOR ADJUSTMENT / DOORSTOPS :


F

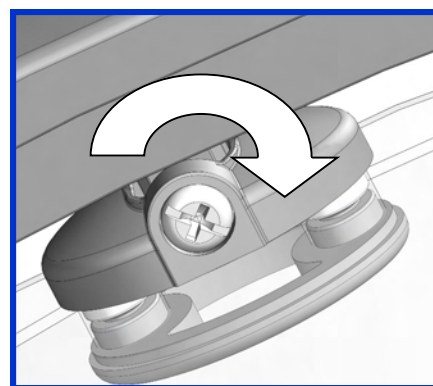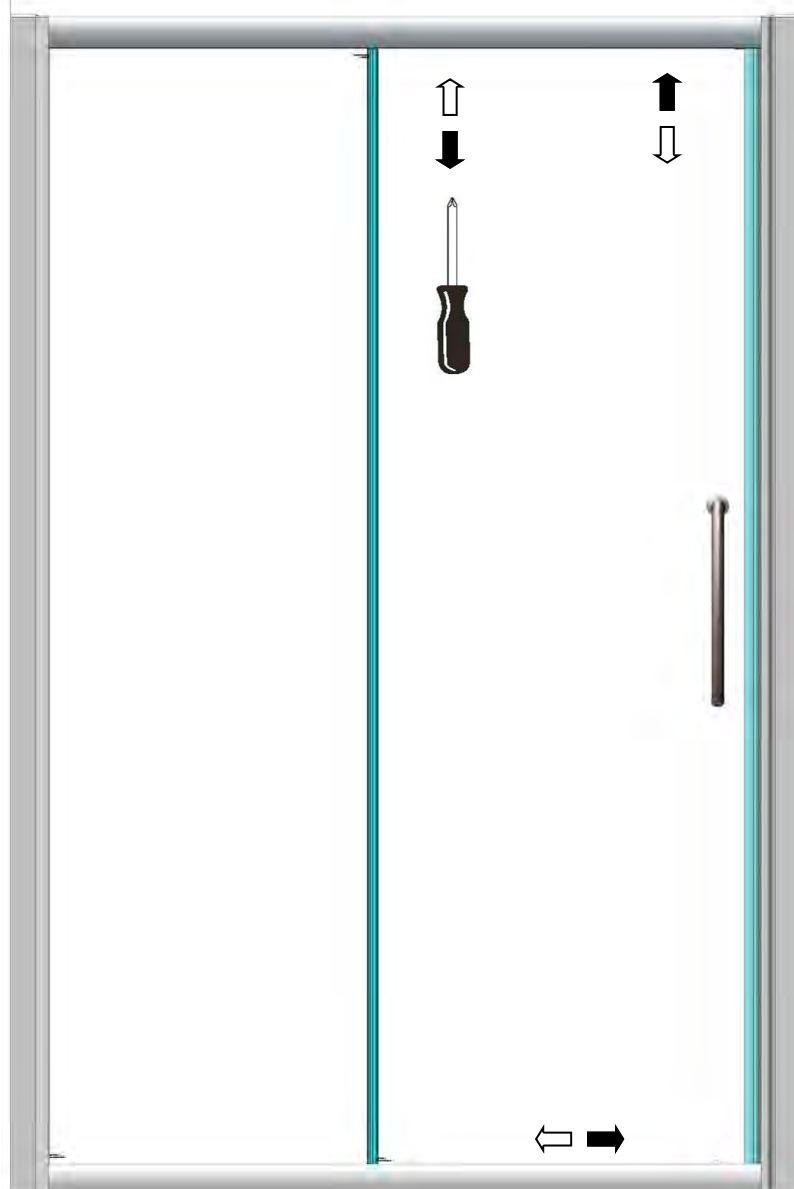


Adjust door heights until even & doors run smoothly. Adjust door angles so that magnetic seals hold door closed with no gaps.



After adjusting, check that clamp screws are tight & fit covers to top wheels




Fit vertical profile top cover caps

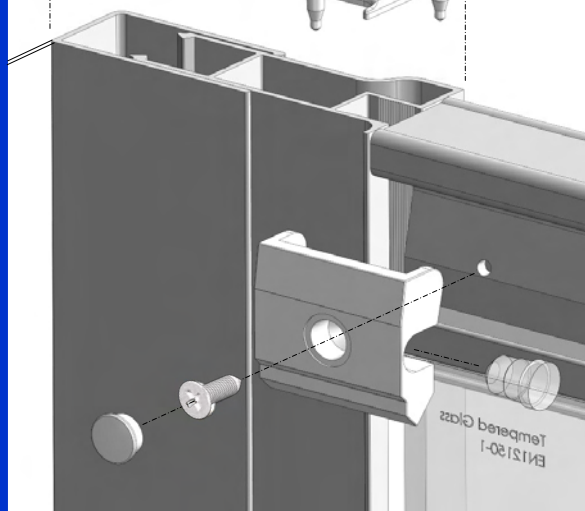

Fit doorstops with 3,5 x 12LG screws, fit caps & doorstop buffers

SEALING :

Ⓒ

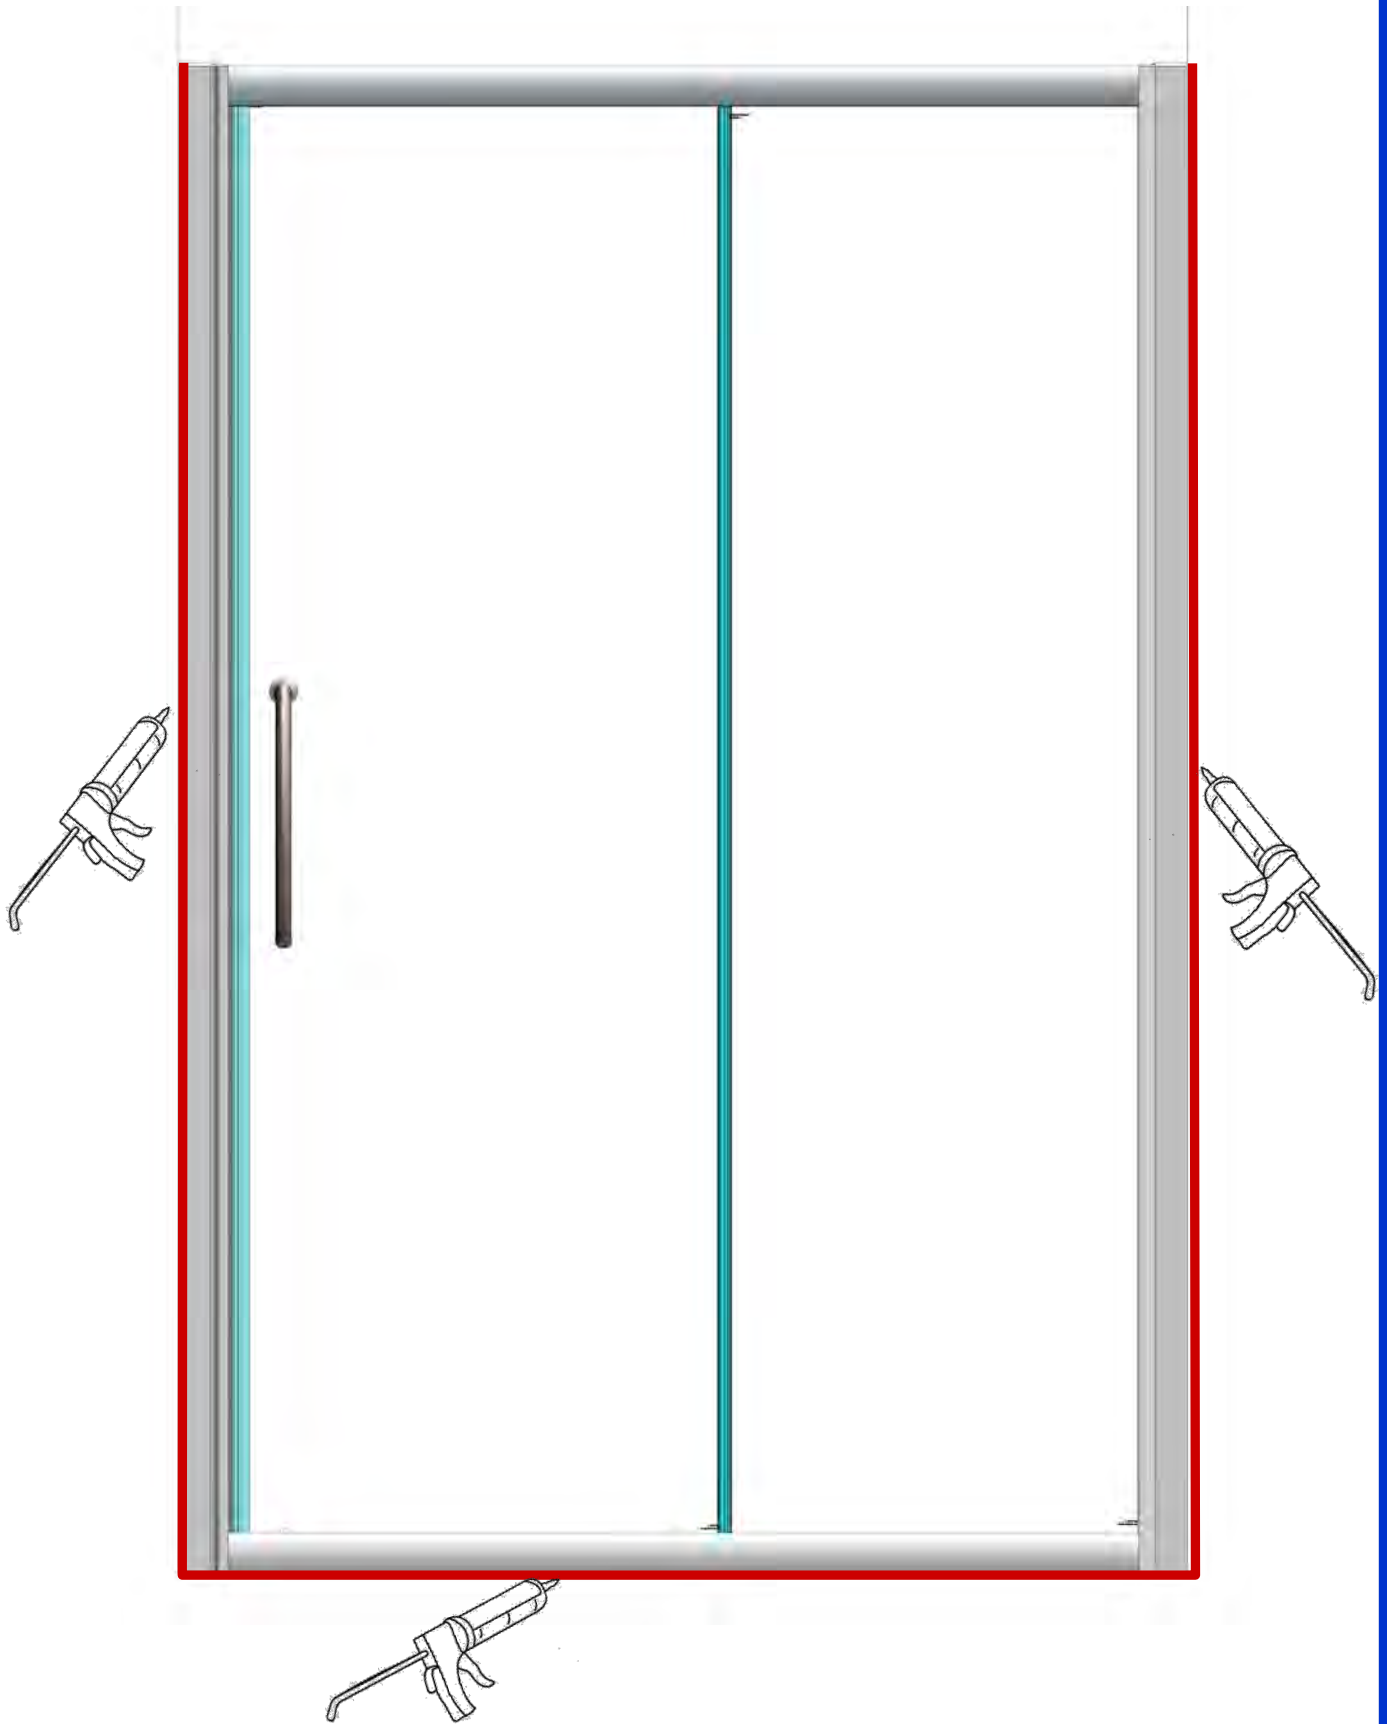

Use of good quality silicone sealant & cleaning / degreasing of all joint areas is recommended.

Apply continuous silicone sealant bead as indicated EXTERNALLY ONLY

BASIC TROUBLESHOOTING :

Door magnetic seals not meeting precisely / not holding :

Ensure magnetic seals are pushed fully onto door edge over entire door length.

Check door alignments & adjust if necessary (see fig F).

Check Magnetic Seal orientations (reverse if necessary).

Door motion noisy / Door not running smoothly / Door loose on bottom rail :

Check for edge seals dragging on glass (can cause 'clicking' noise).

Check top wheels engaged properly in rails & roll smoothly along rails.

Check door height adjustment ~ raise doors so that spring loaded bottom wheels are in contact with & roll smoothly along bottom rail.

Wheels & Grooves are factory greased, however over time this may disperse or become contaminated by dust etc, cleaning of grooves & re application of sanitary silicone based grease will restore & ensure smooth door motion.

Leakage :

The sealing method described in these instructions relies on a continuous seal being applied between shower walls & tray before installing the enclosure (see fig A), it ensures a watertight seal around the perimeter of the enclosure to the shower walls & tray.

In the unlikely event of an enclosure leak, water will be visible on the outside of the enclosure itself, or around the perimeter silicone seal ONLY. Water / moisture appearing outside this area (ie at floor level) is normally due to incorrect tray installation.



Lakes Bathrooms Ltd

Alexandra Way
Ashchurch
Tewkesbury
Gloucestershire GL20 8NB

Service England, Scotland, Wales

8.30am—5pm Mon ~ Thurs

8.30am—4.30pm Fri

Tel / HELPLINE : 01684 853870

Fax : 01684 857411

www.lakesbathrooms.co.uk

Email : admin@lakesbathrooms.co.uk

Service : Northern Ireland

Ian A Kernohan

Firtrees

Green Way Industrial Estate

Conlig

Northern Ireland

BT23 7SU

8.30am—5pm Mon ~ Thurs

8.30am—4.30pm Fri

Tel : 02891 270233

Fax : 02891 270597

Email : info@iakonline.com